

**IMPORTANT CUSTOMER NOTICE  
(PLEASE RETAIN FOR FUTURE USE)**

Thank you for purchasing the game. com system. To enable you to get started quickly, please follow the instructions below:

1. Insert new alkaline batteries (4xAA)
2. Remove back up battery tab
3. Press the RESET button (located on the base of the unit)
4. Press "B" to clear all data
5. Your game. com is now ready to use. For more detailed information, please refer to the instruction booklet enclosed
6. If you should encounter any problems, please consult the Trouble Shooting guide below

**NOTE:**

- a) The game. com system can also be powered via a 9V, 300mA, +ve or -ve polarity adaptor
- b) The unit is equipped with an AUTO TIME OUT feature that will turn the main unit off if there has been no user activity for three minutes

**TROUBLE SHOOTING GUIDE**

<b>FAULT</b>	<b>ACTION</b>
Screen display is too light/dark	- Adjust the contrast control on the left hand side of the unit
No power	- Check/Replace 4 x AA batteries
No power with new batteries	- Check batteries have been correctly inserted
Does not switch ON/OFF	- Press RESET button
Scrambled/locked data	- Press RESET button
Low/No sound	- Check sound is not muted  - Adjust the volume control on left hand side of the unit
High score not being retained	- Press RESET button

If you continue to have difficulties with performance of your system, please do not return it to your retailer before calling our Helpline – 01789 299942

**TIGER  
ELECTRONICS (UK) LLC.**  
Belvedere House, Victoria Avenue  
Harrogate, North Yorkshire HG1 1EL, England

# BATTERY SAFETY GUIDELINES

**ALWAYS**



Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.

**ALWAYS**



Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.

**ALWAYS**



 
Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.

**ALWAYS**



Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.

**NEVER**



Never dispose of batteries in fire as this can cause them to explode. Please put dead batteries in with the normal household waste.

**ALWAYS USE THE BATTERIES RECOMMENDED, AND NEVER MIX BATTERIES OF DIFFERENT TYPES.  
CONSUMER HELPLINE TELEPHONE NUMBER 01789 299942**

**NEVER**



Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.

**ALWAYS**



Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.

**ALWAYS**



 
Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.

**ALWAYS**




Keep loose button cells away from young children.

**ALWAYS**



Make sure battery compartments are secure.

**ALWAYS**

 

Seek medical advice if you believe a cell has been swallowed.

**ALWAYS USE THE BATTERIES RECOMMENDED, AND NEVER MIX BATTERIES OF DIFFERENT TYPES.**

## TIGER UK PRODUCT WARRANTY

Brand \_\_\_\_\_ Product Name/Model No. \_\_\_\_\_  
Date of Purchase \_\_\_\_\_ Purchased from \_\_\_\_\_  
Purchaser's Name \_\_\_\_\_ Purchaser's Address \_\_\_\_\_

---

1. The equipment detailed above is covered by a **12 month** warranty from the date of purchase, against any defects in materials or workmanship.
2. **IMPORTANT** - Please fill in the voucher on this page immediately. Attach your till receipt to the voucher and keep all the details together in a safe place, in case you need to claim against the warranty. Do not send to **Tiger Electronics** unless a defect occurs within the warranty period, (See instruction below). Remember to keep your till receipt safe - you will need it as proof of purchase.
- 3: If any defect should occur during the warranty period, the equipment should be returned to the place of purchase or, alternatively, can be returned direct to **Tiger Electronics LLC**. with proof of purchase, eg. till receipt.
4. **Tiger Electronics LLC** will examine the equipment and if it is found to be defective due to faulty materials or bad workmanship will without charge, repair or replace the equipment at their discretion.
5. If the equipment covered by this warranty is damaged due to misuse, modified or repaired by unauthorised persons or through faulty batteries or battery discharge, then this warranty becomes void.
6. This warranty is personal to the original purchaser and is not transferable.
7. Returns to **Tiger Electronics LLC** should include a cheque or postal order for £2.00 towards the cost of return postage and packing. Products out of warranty will incur a charge. A current price may be obtained by calling the **Helpline number 01789 299942**.
8. Returns to **Tiger Electronics LLC** should be addressed as follows:
  - **Tiger Electronics LLC C/O Consumer Products Distribution**  
Factory 2, Masons Road  
Stratford-Upon-Avon. CV37 9NU
9. Please ensure your return address, post code and telephone number are attached to the product when returning to **Tiger Electronics LLC**.

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT  
AFFECT CUSTOMERS STATUTORY RIGHTS