
 


After removing the electric lighter, insert the Supervision DC Car Adapter.

Después de quitar el encendedor electrico inserté el adaptador para carro de SuperVision.

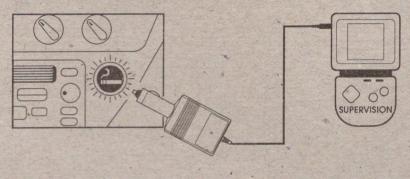



FAULT FALLA	SUGGESTED ACTION ACCION SUGERIDA
The power indicator does not lit. El indicador de encendimiento no scilumina.	Replace the fuse (as shown in fig.1 and fig. 2). Reemplazé el fusible (come es demostra en la figura 1 y figura 2).

Disconnect from Supervision before replacing the fuse.

Desconecte del SuperVision antes de reemplazar el fusible.

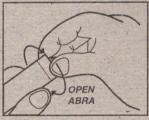


FIG. 1 FIGURA 1

 


FIG. 2 FIGURA 2



USA and Canada SuperVision *1-800-869 8866 Mexico & Latin America Golden Free Trade 1-915-779 0679

NO. 9320D (ESO)