

# SUPER VISION™



Thank you for selecting the WATARA® TRAVELL-MATE

## SECTION 1

### TRAVELL-MATE Features

1. Power Switch (POWER)
2. External Power Supply Jack
3. Contrast Adjustment (CONSTRAT)
4. Direction Buttons
5. Battery Cover (back)
6. Headphone Jack (PHONES ♪)
7. Speaker
8. "A" & "B" Buttons — Please refer the game cartridges instruction.
9. Select Buttons
10. Start Buttons
11. Volume Dial (VOLUME)

 
## SECTION 2

### HOW TO INSTALL THE BATTERIES?

Remove the cover on the back of the TRAVELL-MATE and insert the four "AA" batteries. Make sure that the batteries, plus (+) and minus (—) ends are facing the right directions. Do not use the rechargeable batteries. Do not use mercury oxide batteries. For best results, use alkaline batteries.

#### Important Notice:

- Changing a game cartridges, make sure turn "OFF" the power.
- When inserting a Game cartridge into the TRAVELLMATE slot, please make sure the side with the LABEL faces outward.

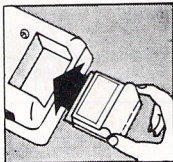


## SECTION 3

### FAULT

### SUGGESTED ACTION

The Display is black.	Adjust the contrast.
The Display is dim.	Replace the batteries.
No sound can be heard during the game.	<ul style="list-style-type: none"> <li>• Check that the Game cartridges is inserted properly.</li> <li>• Adjust the sound volume.</li> </ul>
There is nothing on the display when the power is turned ON.	<ul style="list-style-type: none"> <li>• Turn OFF the power, wait a moment and turn it ON again.</li> <li>• Adjust the contrast.</li> <li>• Check that the Game cartidges is inserted properly.</li> </ul>
 
# “威特霸”電腦遊戲機

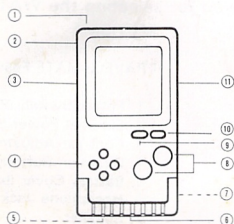

## 第一節

威特霸的特性

1. 電源開關-(Power)
2. 變壓器插座
3. 光暗調節制 (Contrast)
4. 方向控制
5. 電池蓋
6. 立體聲耳筒插座
7. 擴音器
8. “A”及“B”按制——請查閱遊戲機說明書
9. 選擇按制 (Select)
10. 開啓按制 (START)
11. 音量調節制 (VOLUME)

## 第二節

安裝電池方法：

- 將電池蓋打開，依正極(+)及負極(-)方向，放入四枚“A A”電池。

 
注意：切勿用“再充電”電池

切勿用“水銀氧化”電池

用鹼性電池能獲更佳效果

—若轉換遊戲咭時，必須將電源關上。

—將遊戲咭放進遊戲機內時，要注意將有畫貼之面向外，如圖二所示。

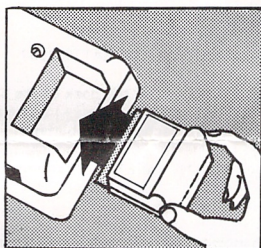

## 第三節

問題	解決方法
1. 若畫面太黑	可調較光暗調節制
2. 若畫面模糊	可換上新電池
3. 若沒有聲音	<ul style="list-style-type: none"> <li>• 可檢查立體聲耳筒是否接觸不良。</li> <li>• 可調較音量調節制</li> </ul>
4. 若電源開啓後並沒有畫面出現	<ul style="list-style-type: none"> <li>• 可關上電源，等候數秒後再將電源開啓。</li> <li>• 可調較光暗調節制</li> <li>• 可檢查遊戲咭是否安裝妥當</li> </ul>

注意：在轉換遊戲咭時，要將電源關上待畫面完全消失時，才可取出遊戲咭。