 



TRAVELL-MATE™


WATARA®

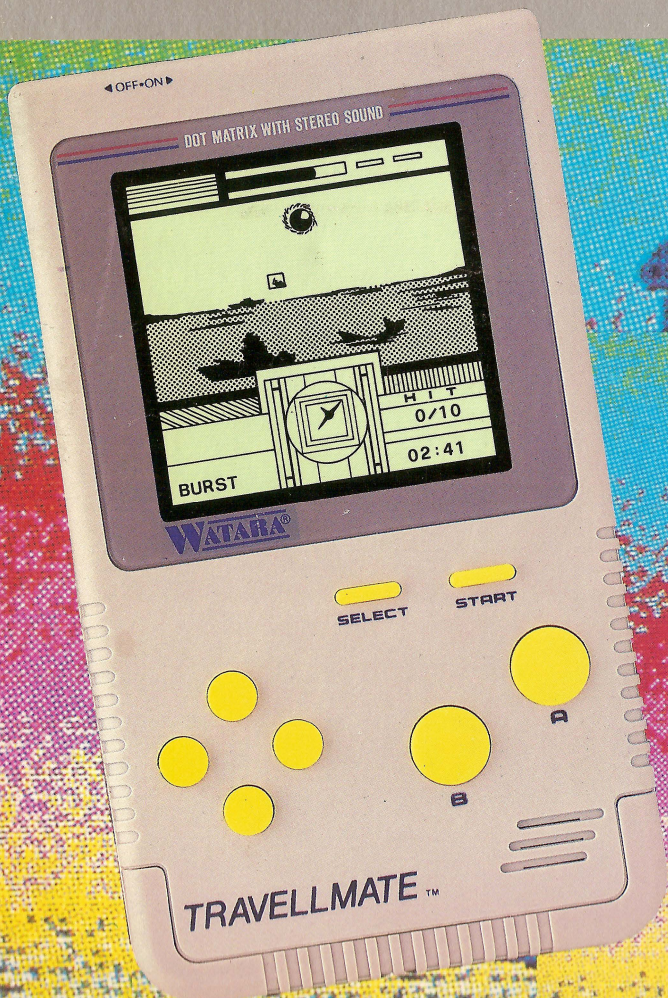

TRAVELL - MATE™

  WATARA®

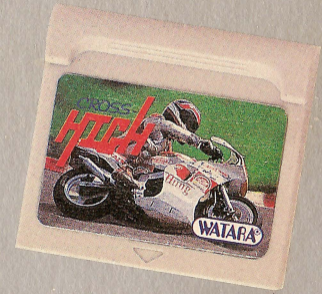


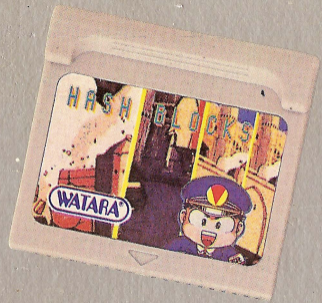

TRAVELL-MATE™

CHARACTERISTIC - ACTION GAMES

 - Jumbo Display
- 70mm X 70mm Dot Matrix LCD
- 25600 Pixel Resolution
- High resolution and 4 grey level
- Built-in video controller
- Powerful CPU and micro-processors with special customer design
- 4 output channel with sound and voice stereo effect
- Interchangeable game cartridges
- Communication interface and 4 data lines for interconnection feature
- Four direction control plus screen contrast and earphones volume control
- Can enjoy and play anywhere ---TRAVELL-MATE

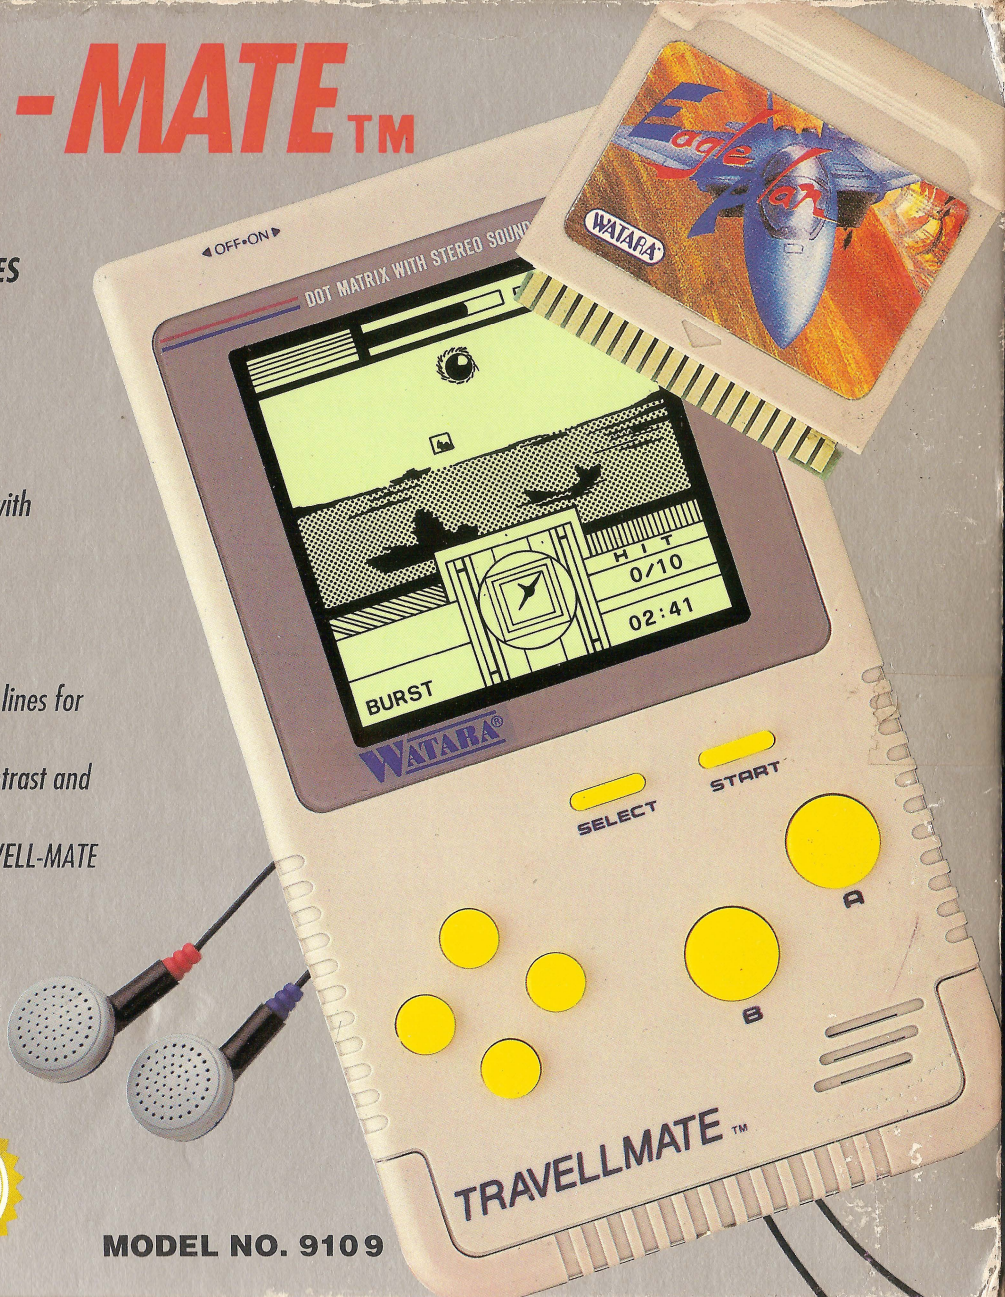


MODEL NO. 9109

TRAVELLMATE™



 Thank you for selecting the WATARA® TRAVELL-MATE
SECTION 1

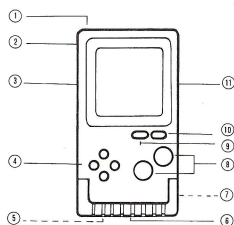

TRAVELL-MATE Features

1. Power Switch (POWER)
2. External Power Supply Jack
3. Contrast Adjustment (CONSTRAST)
4. Direction Buttons
5. Battery Cover (back)
6. Headphone Jack (PHONES ♪)
7. Speaker
8. "A" & "B" Buttons — Please refer the game cartridges instruction.
9. Select Buttons
10. Start Buttons
11. Volume Dial (VOLUME)

SECTION 2

HOW TO INSTALL THE BATTERIES?

Remove the cover on the back of the TRAVELL-MATE and insert the four "AA" batteries. Make sure that the batteries, plus (+) and minus (-) ends are facing the right directions.

 
Do not use the rechargeable batteries.

Do not use mercury oxide batteries.

For best results, use alkaline batteries.

Important Notice:

- Changing a game cartridges, make sure turn "OFF" the power.
- When inserting a Game cartridge into the TRAVELLMATE slot, please make sure the side with the LABEL faces outward.

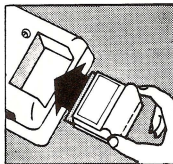

SECTION 3

FAULT

SUGGESTED ACTION

The Display is black.	Adjust the contrast.
The Display is dim.	Replace the batteries.
No sound can be heard during the game.	<ul style="list-style-type: none">• Check that the Game cartridges is inserted properly.• Adjust the sound volume.
There is nothing on the display when the power is turned ON.	<ul style="list-style-type: none">• Turn OFF the power, wait a moment and turn it ON again.• Adjust the contrast.• Check that the Game cartidges is inserted properly.