

# **TRACKSTAR PLUS**

## **User's Manual**



**DIAMOND**  
computer systems, inc.

## **Warranty**

### **Diamond Computer Systems, Inc. One Year Limited Warranty**

Diamond Computer Systems, Inc. warrants this product to be free of defects in materials and workmanship for a period of 1 (one) year from the date of purchase from an authorized Diamond dealer. This warranty is limited to the original purchaser, and to Diamond products that are sold and used within the United States and Canada. A copy of a valid dated sales receipt must be submitted with the product for warranty service. Software is specially excluded from coverage under this warranty.

This limited warranty applies only to Diamond products which do not function properly under normal use, within the manufacturers specifications. It does not apply to products that, in the sole opinion of Diamond Computer Systems, Inc. have been damaged as a result of accident, misuse, neglect, improper packing, or shipping. This warranty is void if the Diamond label or logo, or the serial number have been removed or defaced, or the product has been modified or serviced by anyone other than Diamond Computer Systems, Inc., or an authorized Diamond Service Center.

During the 1 year warranty period, Diamond Computer Systems, Inc. will repair or replace, at its option, any defective product with no charge for parts or labor. To obtain warranty service, write or phone:

Diamond Computer Systems, Inc.  
Service Department  
470 Lakeside Drive  
Sunnyvale, California 94086  
(408) 736-2000

The Service Department will determine whether service will be provided by an authorized service agency in your area or by Diamond Computer Systems, Inc. Do not ship equipment to Diamond Computer Systems, Inc. without a return authorization number (RMA). The purchaser must prepay shipping costs and insurance, and assume the risk of loss during shipping.

Software programs are provided "as is" without warranty of any kind, either expressed or implied. The entire risk as to the selection, quality, results, and performance of the programs are with the user, who must assume all liability and expenses incurred as a result thereof.

Except as expressly set forth above, no other warranties are expressed or implied, including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose. Diamond Computer Systems, Inc. expressly disclaims all warranties not stated herein. All warranties, whether expressed or implied, are limited to the duration of this warranty.

In the event that the product is not free from defects as warranted above, the purchasers sole remedy is repair or replacement as provided above. Under no circumstances will Diamond Computer Systems, Inc. be liable to the purchaser or any user for any damages, including incidental or consequential damages, expenses, lost profits, lost savings, or other damages arising out of use or the inability to use this product.

# Trackstar Plus

## Users Manual

**DIAMOND COMPUTER SYSTEMS, INC.**

**470 Lakeside Drive  
Sunnyvale, California 94086**

**408-736-2000**



# Table of Contents

<b>Before You Begin</b>	
Chapter One.....	Page 1.1
<b>Installing the Hardware</b>	
Chapter Two.....	Page 2.1
<b>Important Concepts</b>	
Chapter Three.....	Page 3.1
<b>Installing the Software</b>	
Chapter Four.....	Page 4.1
<b>Booting the Trackstar System</b>	
Chapter Five.....	Page 5.1
<b>Diskettes in Detail</b>	
Chapter Six.....	Page 6.1
<b>Features &amp; Functions</b>	
Chapter Seven.....	Page 7.1
<b>File Transfer</b>	
Chapter Eight.....	Page 8.1
 <b>Installation PS/2 Model 25</b>	
Appendix A.....	Page A - 1
 <b>Installation PS/2 Model 30</b>	
Appendix B.....	Page B - 1



---

## Chapter One

### Before You Begin

#### How to use this manual

##### The Tutorial Section:

Beginning with Chapter Two, the first section of this manual will lead you step-by-step through the installation and operation of your Trackstar Plus. By the end of Chapter Five you will have installed the Trackstar in your IBM PS/2, configured the board for your particular system, and run your first Apple program. Along the way you will have learned how you can use the special Apple keys from the PS/2 keyboard and how to switch between the Apple and MS DOS systems at will. You will also have learned about the two major Apple operating systems, DOS 3.3 and ProDOS, and how to correctly configure your Trackstar to run programs from each.

##### The Reference Section:

Chapters Six through Ten will cover aspects of the Trackstar system in more depth. They will explain how to copy Apple programs onto your MS-DOS 3.5" diskettes, network, or hard disk drive, how to use your printer with Apple software, and how to transfer text or data between your MS DOS and Apple systems.

One convention used throughout this manual is the use of < > characters to denote a particular key on the keyboard. The statement "Press the <esc> key now" refers to one particular key on the keyboard labeled ESC. You should not type the individual letters E S C.

*Throughout this manual, you will find useful or interesting information set off in italics.*

Your Trackstar Plus is an entire computer system and you may not find it as easy to install as the typical peripheral card. The installation is straightforward and carefully documented. Bear with us through the first five chapters and we will have you up and running with a minimum of frustration.

## Technical Overview:

The Trackstar Plus is a 65C02 Parallel Processor board. It may be installed into an IBM PS/2 Model 25 or 30, and will provide you with the ability to run Apple software on those machines. The Trackstar Plus supports most Apple features and contains enhancements not present on the original Apple systems.

Your Trackstar Plus comes standard with the following features:

- 65C02 Microprocessor
- 1 Mhz and 2 Mhz operation
- 128K Main Memory
- 40 & 80 Column Text
- Apple LoRes, HiRes, and Double High Resolution Graphics
- Supports up to four disk drives
- Supports a hard disk drive
- Supports Local Area Networks
- Supports standard Serial and Parallel ports
- Apple compatible 5.25" disk drive port
- Apple //c compatible game port
- Thunderclock compatible Apple clock.

## Equipment included

Before beginning the installation, please take a moment to review the enclosed parts list and verify that everything you need was included with your Trackstar PLUS. If anything is missing do not attempt to install the product. Contact your Dealer or Diamond Computer Systems for assistance.

## Copying the Trackstar Utility Diskette

Before you procede, you should make one or more backup copies of your Trackstar Utility Disk. Complete instructions for duplicating diskettes is given in your MS DOS operating manual. A brief summary of the procedure is given below:

First, place your MS DOS **SYSTEM DISK** in drive A: and a **blank** diskette in drive B:.

At the A> prompt type: "**FORMAT B:/S** <enter>". This will format the diskette in drive B: as an MS DOS data diskette.

Now, remove the MS DOS SYSTEM DISK from drive A: and insert the TRACKSTAR UTILITY DISK. Type "**COPY A: \*.\* B: <enter>**". All of the files on drive A: will be duplicated onto the diskette now in drive B:.

You have created a duplicate copy of the Trackstar Utility Diskette.

*At this time please place the original Trackstar Utility Diskette in a safe place. It should only be used again if the copy becomes damaged or otherwise unusable.*

1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217  
218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254  
255  
256  
257  
258  
259  
260  
261  
262  
263  
264  
265  
266  
267  
268  
269  
270  
271  
272  
273  
274  
275  
276  
277  
278  
279  
280  
281  
282  
283  
284  
285  
286  
287  
288  
289  
290  
291  
292  
293  
294  
295  
296  
297  
298  
299  
300  
301  
302  
303  
304  
305  
306  
307  
308  
309  
310  
311  
312  
313  
314  
315  
316  
317  
318  
319  
320  
321  
322  
323  
324  
325  
326  
327  
328  
329  
330  
331  
332  
333  
334  
335  
336  
337  
338  
339  
340  
341  
342  
343  
344  
345  
346  
347  
348  
349  
350  
351  
352  
353  
354  
355  
356  
357  
358  
359  
360  
361  
362  
363  
364  
365  
366  
367  
368  
369  
370  
371  
372  
373  
374  
375  
376  
377  
378  
379  
380  
381  
382  
383  
384  
385  
386  
387  
388  
389  
390  
391  
392  
393  
394  
395  
396  
397  
398  
399  
400  
401  
402  
403  
404  
405  
406  
407  
408  
409  
410  
411  
412  
413  
414  
415  
416  
417  
418  
419  
420  
421  
422  
423  
424  
425  
426  
427  
428  
429  
430  
431  
432  
433  
434  
435  
436  
437  
438  
439  
440  
441  
442  
443  
444  
445  
446  
447  
448  
449  
450  
451  
452  
453  
454  
455  
456  
457  
458  
459  
460  
461  
462  
463  
464  
465  
466  
467  
468  
469  
470  
471  
472  
473  
474  
475  
476  
477  
478  
479  
480  
481  
482  
483  
484  
485  
486  
487  
488  
489  
490  
491  
492  
493  
494  
495  
496  
497  
498  
499  
500  
501  
502  
503  
504  
505  
506  
507  
508  
509  
510  
511  
512  
513  
514  
515  
516  
517  
518  
519  
520  
521  
522  
523  
524  
525  
526  
527  
528  
529  
530  
531  
532  
533  
534  
535  
536  
537  
538  
539  
540  
541  
542  
543  
544  
545  
546  
547  
548  
549  
550  
551  
552  
553  
554  
555  
556  
557  
558  
559  
560  
561  
562  
563  
564  
565  
566  
567  
568  
569  
570  
571  
572  
573  
574  
575  
576  
577  
578  
579  
580  
581  
582  
583  
584  
585  
586  
587  
588  
589  
590  
591  
592  
593  
594  
595  
596  
597  
598  
599  
600  
601  
602  
603  
604  
605  
606  
607  
608  
609  
610  
611  
612  
613  
614  
615  
616  
617  
618  
619  
620  
621  
622  
623  
624  
625  
626  
627  
628  
629  
630  
631  
632  
633  
634  
635  
636  
637  
638  
639  
640  
641  
642  
643  
644  
645  
646  
647  
648  
649  
650  
651  
652  
653  
654  
655  
656  
657  
658  
659  
660  
661  
662  
663  
664  
665  
666  
667  
668  
669  
670  
671  
672  
673  
674  
675  
676  
677  
678  
679  
680  
681  
682  
683  
684  
685  
686  
687  
688  
689  
690  
691  
692  
693  
694  
695  
696  
697  
698  
699  
700  
701  
702  
703  
704  
705  
706  
707  
708  
709  
710  
711  
712  
713  
714  
715  
716  
717  
718  
719  
720  
721  
722  
723  
724  
725  
726  
727  
728  
729  
730  
731  
732  
733  
734  
735  
736  
737  
738  
739  
740  
741  
742  
743  
744  
745  
746  
747  
748  
749  
750  
751  
752  
753  
754  
755  
756  
757  
758  
759  
760  
761  
762  
763  
764  
765  
766  
767  
768  
769  
770  
771  
772  
773  
774  
775  
776  
777  
778  
779  
780  
781  
782  
783  
784  
785  
786  
787  
788  
789  
790  
791  
792  
793  
794  
795  
796  
797  
798  
799  
800  
801  
802  
803  
804  
805  
806  
807  
808  
809  
810  
811  
812  
813  
814  
815  
816  
817  
818  
819  
820  
821  
822  
823  
824  
825  
826  
827  
828  
829  
830  
831  
832  
833  
834  
835  
836  
837  
838  
839  
840  
841  
842  
843  
844  
845  
846  
847  
848  
849  
850  
851  
852  
853  
854  
855  
856  
857  
858  
859  
860  
861  
862  
863  
864  
865  
866  
867  
868  
869  
870  
871  
872  
873  
874  
875  
876  
877  
878  
879  
880  
881  
882  
883  
884  
885  
886  
887  
888  
889  
890  
891  
892  
893  
894  
895  
896  
897  
898  
899  
900  
901  
902  
903  
904  
905  
906  
907  
908  
909  
910  
911  
912  
913  
914  
915  
916  
917  
918  
919  
920  
921  
922  
923  
924  
925  
926  
927  
928  
929  
930  
931  
932  
933  
934  
935  
936  
937  
938  
939  
940  
941  
942  
943  
944  
945  
946  
947  
948  
949  
950  
951  
952  
953  
954  
955  
956  
957  
958  
959  
960  
961  
962  
963  
964  
965  
966  
967  
968  
969  
970  
971  
972  
973  
974  
975  
976  
977  
978  
979  
980  
981  
982  
983  
984  
985  
986  
987  
988  
989  
990  
991  
992  
993  
994  
995  
996  
997  
998  
999  
1000

---

## Chapter Two

# Installing the Hardware

### Preparing your Workspace

Take this moment to assemble the tools you will need. Your PS/2 reference manual will describe what tools you will need to open the case before installing the Trackstar Plus. In addition you will need a soft cloth on which to set the computer and enough extra space to set this manual beside it.

The Trackstar Plus can be used in either the IBM PS/2 Model 25 or the PS/2 Model 30. Installation for each of these machines is quite different.

At this time, please turn to the hardware installation instructions appropriate to your machine:

If you have an IBM PS/2 **Model 25**, then turn to **Appendix A**

If you have an IBM PS/2 **Model 30**, then turn to **Appendix B**

When you have completely installed the hardware, please turn to Chapter Three to begin installation of the software.

**TURN TO APPENDIX A or B NOW**



---

## Chapter Three

### Important Concepts

#### Before Configuring your System

There are three concepts crucial to the successful installation of the Trackstar. These concepts relate to how the Trackstar System uses the hardware of your MS DOS computer while running Apple software, particularly with respect to the disk drives. The Trackstar has several unique disk features that make the system much more powerful than the standard Apple //e.

The three areas that we will cover in this chapter are: Software Compatibility, Storing Apple programs under MS DOS, and the proper use of your MS DOS disk drives while in Trackstar mode.

This section will provide you with a necessary overview before you configure the system in Chapter Four. Each of the concepts explained here will be covered in more detail later in the manual.

#### Software Compatibility

Software compatibility is quite important to getting the most out of your Trackstar System.

The Trackstar system may be initialized to one of two compatibility levels; **standard** Compatibility or **high** Compatibility.

Look at the diagram in Figure 1.

You will see that your Trackstar system can be configured in one of three possible ways; one in standard compatibility and two in high compatibility. All compatibility modes relate to the particular version of the BASIC language that is stored in the Trackstar.

#### Standard Compatibility

The Trackstar comes equipped with a version of the BASIC language written by Language Arts, Inc. This BASIC is very similar to, but not identical with, that supplied by Apple Computer. As a result, most Apple programs, but not all, will run. When using the built in Language Arts BASIC, you will be in the standard compatibility mode.

## Trackstar System Memory

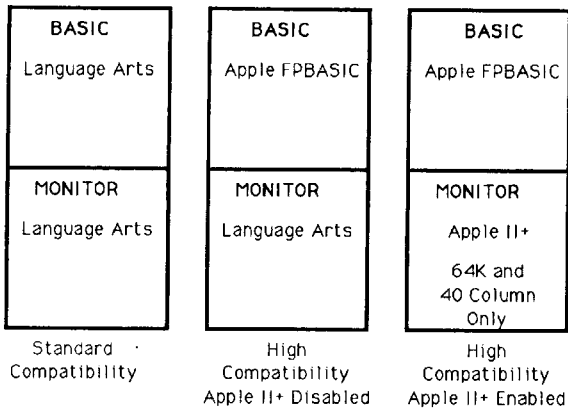


Figure 3-1

### High Compatibility

Certain programs require the use of Apple's version of BASIC in order to run correctly. A copy of this BASIC, called FPBASIC, is contained on the APPLE DOS 3.3 MASTER diskette. It is not included with the Trackstar product and must be supplied by the user. FPBASIC can be loaded into the Trackstar system at startup time. When this version of BASIC is loaded you are in high compatibility mode.

*Any program that runs in standard compatibility mode will also run in high compatibility.*

If you have a copy of Apple FPBASIC you might prefer to use High Compatibility mode.

### About Apple Diskettes and TrackStore

The Apple programs that you will be using are provided on standard 5.25" floppy diskettes. These diskettes can only be read from an Apple compatible disk drive. The Trackstar System comes equipped with an Apple compatible disk drive port for just this purpose.

Your Trackstar also has another method for storing Apple programs. This other method, called TrackStore, allows Apple software to be placed on an MS DOS hard disk, a floppy disk drive, a network file server, or any other MS DOS volume.

The TrackStore concept allows you to create MS DOS files large enough to hold the entire contents of an Apple floppy disk. You can then copy programs from Apple diskettes into these MS DOS files.

This MS DOS file (or TrackStore diskette) can now be used exactly as if it were an actual Apple floppy disk. You can boot from a TrackStore disk, you can save data on a TrackStore disk, you can create and initialize blank TrackStore disks. As far as the Trackstar is concerned a TrackStore disk **IS** an Apple floppy diskette. TrackStore diskettes are explained in greater detail in Chapter Six.

Remember: Actual Apple diskettes can only be read or written using an External Apple disk drive.

TrackStore diskettes are MS DOS files that contain within them the contents of an Apple diskette. TrackStore diskettes can be kept on any MS DOS volume.

Within the Trackstar system, any menu that requires selection of a diskette will indicate if an Apple or TrackStore diskette is expected.

## Assigning Apple Disk Drives in the PS/2

An Apple //e computer typically has two 5.25" floppy disk drives attached to it. One of these drives, the boot drive, is identified by the Apple as being in SLOT 6, D1. This drive is the one from which Apple programs are first started or "booted".

The other drive is identified as SLOT 6, D2. This drive, the data drive, is used to read data and program diskettes.

Your Trackstar system can read and write programs from up to four "Apple disk drives".

Your Trackstar System can have, at the most, one actual Apple disk drive attached. However, it can be told to use your MS DOS disk drives as if they were Apple drives. This is what you will do during the configuration process.

As was mentioned above, all Apple // software comes on 5.25" disks. When you configure the system, especially as a first time user, you will want your Apple boot drive (SLOT 6, D1) to be one capable of reading these Apple diskettes. This means that the drive associated with SLOT 6, D1 should be the External Apple drive.

Drive two (SLOT 6, D2) can be an Apple floppy disk or any MS DOS volume. It will use either Apple diskettes or *TrackStore* media depending on the type of drive selected.

These two disk drives can be used with any Apple operating system; DOS, ProDOS, or PASCAL.

## Apple ProDOS and Large Disk Drives

The last two drives that can be configured to your Trackstar system are for the use of ProDOS only. These drives are assigned as Apple drives SLOT 7, D1 and SLOT 7, D2. They are similar in concept to 140K *TrackStore* diskettes except that they can be configured as large volumes. These Apple drives can be assigned to any MS DOS volume using the configuration program **TSUTILITY**. They can be any one of the following sizes up to the limit of free space on the MS DOS disk: 360K, 720K, 1Mb, 2Mb, 5Mb, or 10Mb. A SLOT 7 drive would usually be assigned to an MS DOS hard disk or network.

If you have assigned a SLOT 7 drive you will be offered the choice of booting from SLOT 6, D1 or SLOT 7, D1 when the Trackstar is initialized.

## Automatic Loading of FPBASIC

At the beginning of this chapter the subject of standard and high compatibility was discussed. If you wish to run the Trackstar system in high compatibility, then FPBASIC must be loaded into the system when Trackstar is initialized.

During the configuration process you will be asked which disk drive you wish to load FPBASIC from. If you specify any floppy disk drive, containing either *TrackStore* or Apple media, you will be prompted to insert a diskette containing FPBASIC into that drive when the Trackstar is initialized.

FPBASIC will load without prompting from a *TrackStore* diskette named **INIT** if it is on the same MS-DOS volume as the STAR.COM program.

FPBASIC will also load without prompting from a hard disk or network.

If FPBASIC is present on a *TrackStore* diskette, the name of that TrackStore diskette must be **INIT** for automatic loading to take place.



---

## Chapter Four

# Installing the Software.


### Configuring the Utility Diskette

There is one last step to perform before you can run your first Apple program. The Trackstar must be configured to recognize the peripherals attached to your machine.

This program is largely self-explanatory. The illustrations will provide a guide to the general flow of the Configuration Utility. Refer to the text for guidance and suggestions on each section.

The configuration program for the Trackstar system is called **TSUTILITY.COM**. If you copied the Trackstar Utility diskette as described in Chapter One then a copy of this program is on the new Trackstar Utility Diskette still in drive B:. If you have not copied the Trackstar Utility diskette it is suggested that you do so now. Then, insert the copy into your MS-DOS drive and type "**TSUTILITY** <enter>".

You should now see the screen in Figure 4-1.

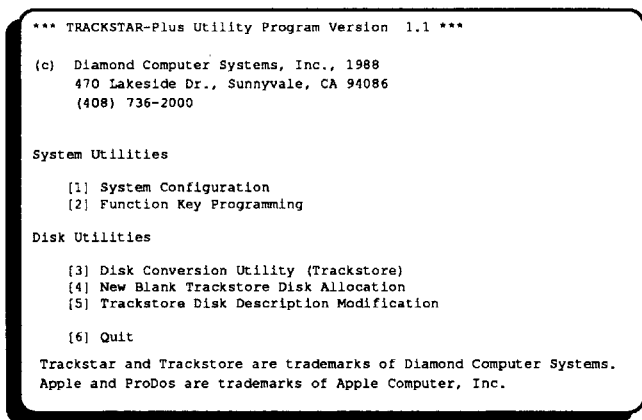

```
*** TRACKSTAR-Plus Utility Program Version 1.1 ***

(c) Diamond Computer Systems, Inc., 1988
    470 Lakeside Dr., Sunnyvale, CA 94086
    (408) 736-2000

System Utilities

    [1] System Configuration
    [2] Function Key Programming

Disk Utilities

    [3] Disk Conversion Utility (Trackstore)
    [4] New Blank Trackstore Disk Allocation
    [5] Trackstore Disk Description Modification

    [6] Quit

Trackstar and Trackstore are trademarks of Diamond Computer Systems.
Apple and ProDos are trademarks of Apple Computer, Inc.
```

Figure 4-1

This is the Trackstar Utility program. You will use it to describe the peripherals attached to your system, to configure the function keys, and to store Apple programs on an MS-DOS disk or network.

To use your Trackstar most efficiently you must describe your system configuration.

You may use this program at any time to change your configuration as required.

[1] Configure the Disk Drives

[2] Configure the Printer

[3] Exit the Install Program

Use the arrow keys and <enter> key to select

Figure 4-2

For now, you must run the System Configuration section of the Trackstar Utility Program. Press the 1 key and <Enter> now.

You should now be looking at the System Configuration Menu. See Figure 4-2.

The System Configuration consists of two parts, Configuring your disk drives and configuring your printer ports. As we go through this program we will address each section in turn.

## Configuring the Disk Drives

First, we will configure the disk drives. In this section you will assign which of your MS-DOS disk drives will be used with the Trackstar and how they will be used while in Trackstar mode.

Press the 1 key and <Enter> now.

You should see the screen in Figure 4-3

This screen shows how your system is currently configured. The SLOT 6 drives are your Apple DOS boot and data drives. The SLOT 7 drives are those assigned for the special ProDOS large volumes. The Automatic FPBASIC loading disk is the drive from which Apple FPBASIC will be loaded for high compatibility mode.

If these selections appear correct for your machine, you may press the 2 key and <Enter> to exit to the System Configuration Menu at this time. If you wish to change the selections, press the 1 key and <Enter> to proceed with the disk drive configuration.

```
Current drive selections are as follows.

Slot 6, D1 (Standard boot disk) : External Apple Drive
Slot 6, D2 (Standard data disk) : drive-B (Trackstore format)

Slot 7, D1 (Alternate boot disk): Drive-C (PRODOS.HD1: 1 Mb)
Slot 7, D2 (Alternate data disk): Drive-C (PRODOS.HD2: 1 Mb)

Automatic FPBASIC loading disk : Drive-B (Trackstore format)

[1] Modify
[2] Exit

Use Arrow Keys and <Enter> key to select
```

Figure 4-3

If you elect to proceed with the installation, you should see the screen shown in Figure 4-4.

```
You will now be asked some questions about the disk drives
attached to your system

Do you have an Apple Compatible drive
attached to the Trackstar?

[1] ATTACHED
[2] NOT ATTACHED


Note : An Apple compatible disk drive is
        required to run Apple software
        that has been "half-track" copy
        protected.

Use Arrow keys and <enter> to select
Press <esc> key for previous screen
```

Figure 4-4

If you have an Apple Compatible disk drive attached to your Trackstar, press the 1 key and <Enter>. If an Apple drive is not attached at this time, press the 2 key and enter.

The screen shown in Figure 4-5 will now appear. Enter the number corresponding to the type of drive installed as drive A: on your PS/2 then Press <enter>.

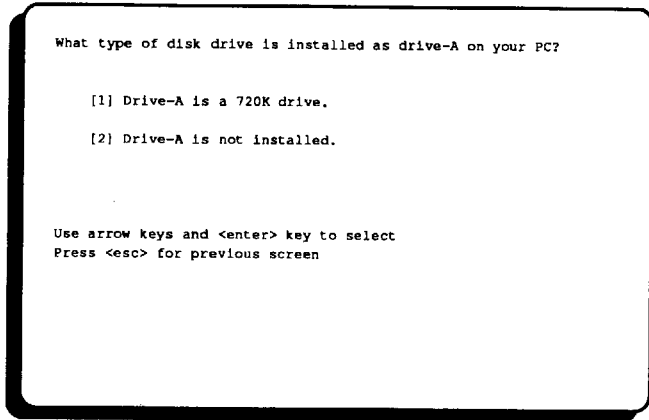


What type of disk drive is installed as drive-A on your PC?

- [1] Drive-A is a 720K drive.
- [2] Drive-A is not installed.

Use arrow keys and <enter> key to select  
Press <esc> for previous screen

Figure 4-5

The next screen (not shown) asks the same question for the drive assigned to B:. Select the drive type and then press <enter>. The screen shown in Figure 4-6 will now appear.

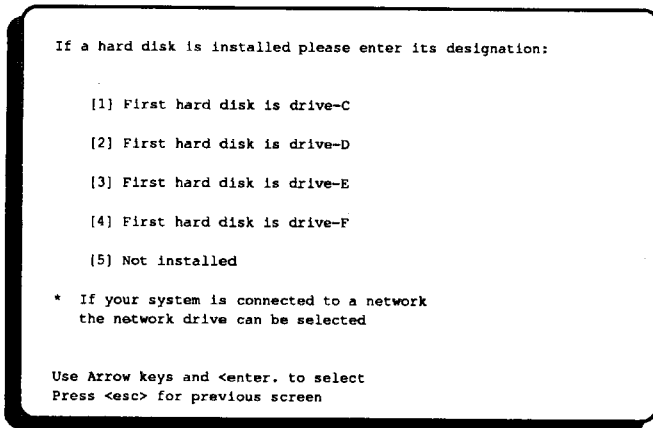

If a hard disk is installed please enter its designation:

- [1] First hard disk is drive-C
- [2] First hard disk is drive-D
- [3] First hard disk is drive-E
- [4] First hard disk is drive-F
- [5] Not installed

\* If your system is connected to a network  
the network drive can be selected

Use Arrow keys and <enter> to select  
Press <esc> for previous screen

Figure 4-6

The Trackstar can also use any two hard disk drives attached to your system. This screen and the one that follows allows you to specify which two drives are to be accessible to the Trackstar. Should you be lucky enough to have three hard disk drives, you will have to make a choice!

If your computer is attached to a network, you should specify the letter designation of the network file server as a hard disk drive.

Now we come to the configuration section. Each screen displayed in this section will have certain choices displayed based on the actual equipment installed in your computer. These screens will be similar to the Figures shown in this manual, but not identical with them.

Based on the equipment you specified earlier, the System Configuration Program will suggest which choice you should make at each menu. If you are unsure of what choice to make at a particular screen, then accept the suggestion given. You may return to the System Configuration at any time to change a selection.

You will now see the screen in Figure 4-7. You are selecting which of your disk drives will be used when booting or starting an Apple program. Remember the difference between drives capable of reading actual Apple diskettes and drives that use TrackStore diskettes. Refer back to Chapter 3 if necessary.

The Trackstar requires that you specify a drive that will be used when the system is initially started (boot disk). This will be identified as SLOT 6, D1 by the Trackstar.

For your system this drive would normally be  
Drive-A (Apple Format)

<SLOT 6, D1>  
Which drive would you like to use : 1

- [1] External Apple Drive (Apple Format)
- [2] Drive-A (Trackstore Format)
- [3] Drive-C (Trackstore Format)

Use arrow keys and <Enter> to select.  
Press <ESC> key for previous screen.

Figure 4-7

Select a drive for SLOT 6, D1 and press <Enter>.

The next screen (not shown) will ask for the drive to be used as the data drive in SLOT 6, D2.

If you have only one floppy disk drive attached to your system, it is OK to have the same MS-DOS disk drive assigned as Apple drive D1 AND D2!

For the last two disk assignment screens you will be selecting the drives for the two special ProDOS volumes. See Figure 4-8. (second screen not shown).

In addition to the standard Trackstar drives you just selected, you can specify two more drives for use with Apple PRODOS. These drives will be identified as <SLOT7,D1> and <SLOT7,D2>. For the experienced user this option will allow access to large PRODOS volumes with a much faster disk access time. These volumes are best located on a hard disk.

Novice Trackstar users may elect to skip this section at this time. You will still be able to use Apple PRODOS based software in the <SLOT 6> drives.

<SLOT 7, D1>

Please select PRODOS volume-1 : 1

- [1] Drive-A
- [2] Drive-C
- [3] No assignment at this time

Use arrow keys and <Enter> to select.  
Press <ESC> key for previous screen.

Figure 4-8

The ProDOS volumes can be on any MS-DOS disk drive. Placing them on a hard disk volume is recommended. These volumes can be any of several sizes up to the free space remaining on the specified drive (360K, 720K, 1Mb, 2Mb, 5Mb, or 10Mb each)

Note that the ProDOS "disks" created with this selection are unformatted as far as the Apple software is concerned. You must use an Apple ProDOS Format Utility to format the volume before storing data on it. For each ProDOS hard disk volume selected, you will be asked the size you want it to be. See Figure 4-9. ProDOS volumes created on floppy diskettes will be the largest size allowed by that floppy drive.

The large ProDOS volumes used in SLOT 7, D1 and SLOT 7, D2 can only be created or modified in this section of the System Configuration program.

```
2 Mbytes of free space on Drive-D
What size of PRODOS Volume-1 (PRODOC.HD1) do you want?
```

- [1] 352 Kbytes
- [2] 704 Kbytes
- [3] 1 Mbytes
- [4] 2 Mbytes
- [5] 5 Mbytes
- [6] 10 Mbytes

```
Use arrow keys then <SPACE BAR> to select
Press <Esc> key to cancel
```

Figure 4-9

The last screen in this section, Figure 4-10, asks for the drive from which FPBASIC is to be loaded. This drive should only be assigned if you have a copy of FPBASIC available and wish to use the Trackstar's High Compatibility mode.

```
The Trackstar will run Apple software in either standard
compatibility or high compatibility mode. To run in high
compatibility mode a copy of Apple FPBASIC must be loaded
into the system. You can specify the the drive for automatic
loading.
```

```
Please select the drive : 1
```

- [1] External Apple Drive (Apple format)
- [2] Drive-A (Trackstore format)
- [3] Drive-C (Trackstore format)
- [4] No automatic loading

```
Note : If FPBASIC is to be loaded from a Trackstore disk,
       the name of that disk must be "INIT".
```

```
Use arrow keys and <Enter> to select.
Press <ESC> key for previous screen.
```

Figure 4-10

FPBASIC can be loaded from an Apple diskette. Usually this will be the Apple DOS 3.3 Master diskette. It can also be loaded from a TrackStore diskette named <INIT> on the specified MS-DOS drive.

As the Trackstar system is initialized the system will automatically load FPBASIC from a TrackStore diskette named INIT on a hard disk or network. If a floppy drive is specified the system will prompt for a diskette containing FPBASIC to be loaded into that drive.

If you have a copy of FPBASIC, select the drive it will load from now. If this is your first configuration, you should select the External Apple Drive.

Press the <enter> key to select.

You will now be presented with the screen as shown in Figure 4-3. This screen displays all of the choices you have made regarding disk drive assignments.

If these choices are correct, press the <spacebar> to continue. If you wish to change any selection, you may use the <esc> key to step back through the drive configuration section.

## Configure the Printers

Once more you will see the System Configuration Menu as shown in Figure 4-2. Select option [2] and press <enter> to configure your printer(s). See Figure 4-11.

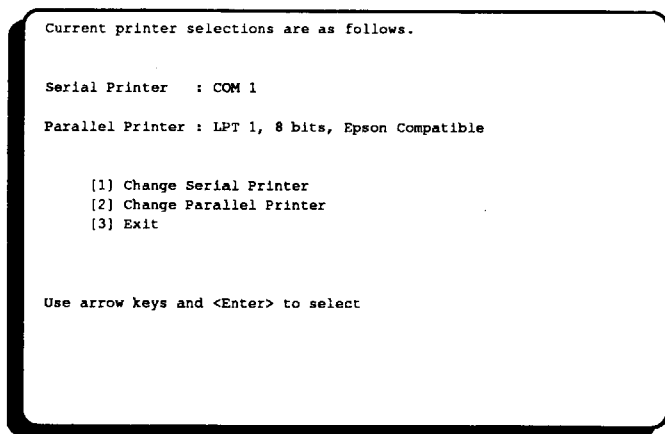


Figure 4-11

The Trackstar uses the printer(s) attached to your MS-DOS computer to output text from Apple programs. You must use this section to describe which COM: or LPT: port(s) your MS-DOS printer is connected to.

Selecting option 1 will display the COM: port currently selected for your machine. The default value is COM1:, the standard value for serial printers. You may select between COM1 and COM2.

Selecting Option 2 will display the LPT: port, data length, and printer type for your parallel printer. The default printer settings are very common and most likely correct for your machine. The Epson Compatible printer is used to describe all printers other than DMP 130/140 series machines. Printer configuration is covered further in Chapter Seven.

## Exit the Install Program

When you exit from the Printer Configuration section, you will have completed the entire system configuration. Select Option [3] at this time to Exit the System Configuration Menu.

You should now see the Trackstar Utility Program Main Menu as shown in Figure 4-1. Press the 6 key and <enter> to return to MS-DOS.

You are now ready to run your first Apple program on the Trackstar!



---

## Chapter Five

# Booting the Trackstar System

### Using The Apple Keyboard

Before you start your first Apple program there are a few things you need to know about the keyboard. Apple computers have three keys that are not available on your MS-DOS keyboard. They are:

- **OPEN APPLE**
- **CLOSE APPLE**
- **RESET**

The OPEN and CLOSE APPLE keys are similar to the SHIFT function. They are used to alter the meanings of the standard alpha keys.

*CLOSE APPLE may sometimes be referred to as SOLID APPLE in Apple documentation.*

For example, in AppleWorks, to begin a PRINT operation you would hold down the OPEN APPLE key and then press P. Many Apple programs take advantage of this feature.

When using the Trackstar you will press <F9> for **OPEN APPLE** and <F10> for the **CLOSE APPLE** function.

The Apple RESET key is used to Reset or Reboot an operating Apple program. This RESET function is available from the **Trackstar Help Menu**.

To access the **Trackstar Help Menu**, you must first be Trackstar mode. While in Trackstar mode, you can at any time, press the F1 key followed by the ESC key.

Pressing <F1> followed by <ESC> will display the following menu shown in Figure 5-1.

*Accessing the Help Menu with F1 ESC will not interrupt your Apple program. If you return to your Apple program without RESETing or REBOOTing the system that program will continue to run.*

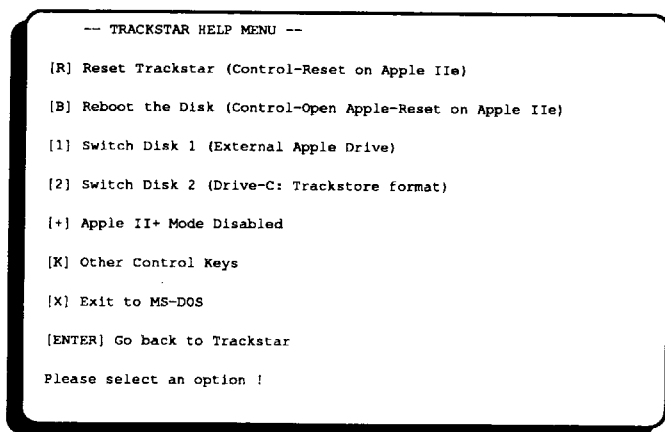


Figure 5-1

Pressing the **R** key from within the Trackstar Help Menu will cause a RESET to be sent to the Apple program. This would be the same as pressing CONTROL - RESET on an Apple.

Pressing the **B** key from within the Trackstar Help Menu will cause the Trackstar to reboot from the diskette in drive D1. This is the same as pressing **CONTROL OPEN-APPLE RESET** on an Apple.

While in the Trackstar Help Menu, you can return to your Apple program by pressing ENTER.

The other options in the Trackstar Help Menu will be covered in the following Chapters.

*Many early Apple programs do not accept lower case characters. If you are using such a program, remember to use the CAPS LOCK key*

## Booting an Apple diskette

The Trackstar is initialized by running the program **STAR.COM** from MS-DOS. STAR.COM can be run from any MS-DOS volume; floppy disk, hard disk, or network.

If you have been following this manual in sequence, a configured copy of STAR.COM should be in your B: drive now.

At the B: prompt type **STAR** and press the <enter> key. You will see one of the following two screens:

## High Compatibility Boot

If you specified during System Configuration that you wished the system to initialize in High Compatibility mode from a floppy diskette, you will see the screen in Figure 5-2.

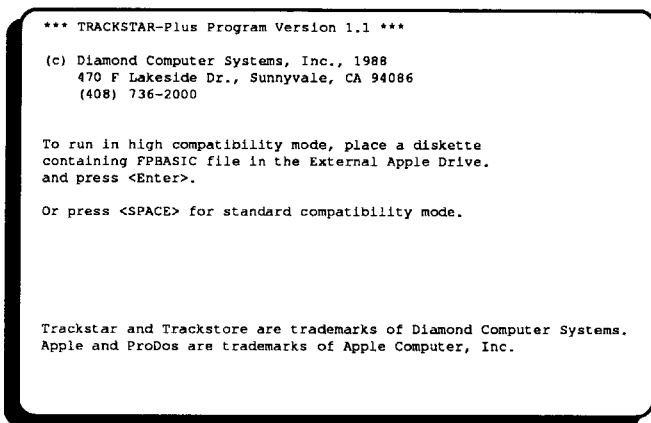


Figure 5-2

If you specified that FPBASIC was to be loaded from a floppy drive, then insert a diskette in that drive now and press <enter>. If a diskette containing FPBASIC is not available at this time, you may press <spacebar> for a Standard Compatibility boot. See Figure 5-3.

Similarly, if you specified that FPBASIC was to be loaded from a TrackStore diskette on a hard drive or network, the system will attempt to load it now. If a TrackStore diskette named INIT, or FPBASIC itself, is unavailable on the specified drive a warning message will appear. You may then press <spacenar> for a Standard Compatibility boot.

## Starting the Apple Program

You should now see a screen similar to the one displayed in Figure 5-3. The exact menu is based on the choices you made during the System Configuration and may be different from the one displayed here.

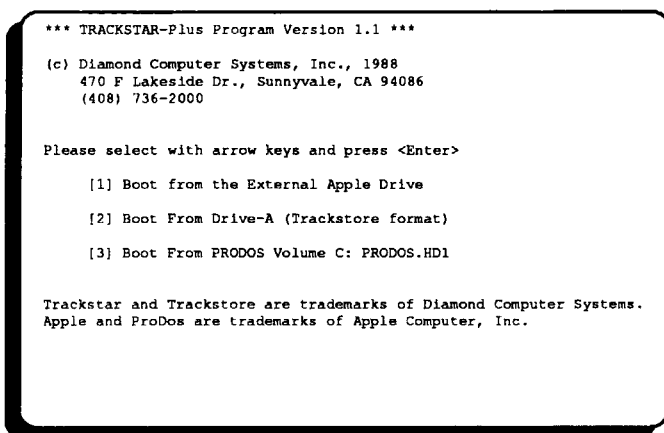


Figure 5-3

You may now be given a few options. If you have an External Apple drive attached to your system, you can insert an Apple diskette in it now and press the <enter> key. Or...

If you specified that the system would boot from a *TrackStore* diskette, hard disk, network file server, or ProDOS volume, refer to Chapter Six for more information on those options.

One last press of the <enter> key and the Language Arts banner will be displayed at the top of the screen, the disk drive will spin, and the Apple program will load and run.

Remember:

Many Apple programs require that CAPS LOCK be enabled.

To return to MS-DOS hold down the <alt> key and press the <esc> key.

If problems occur, please check your installation and review Chapter Three on Apple/MS-DOS compatibility.

## After the Basics

Now that you have the basics down we can go on to cover more detailed aspects of your Trackstar System. The following chapters will introduce you to features that will enhance the use of Apple software on your computer.

---

## Chapter Six

# Diskettes in Detail

### Apple Diskettes

The Apple programs that you will be using are provided on standard 5.25" floppy diskettes. These diskettes can only be read on an Apple or Apple compatible disk drive. Your Trackstar system comes equipped with an Apple compatible drive interface for just this purpose.

As you proceed with this chapter, you will learn how information is stored on a floppy diskette and how you may copy these Apple programs to a floppy, hard disk drive or file server on your MS-DOS computer.

### The TrackStore Concept

MS-DOS programs and data are stored on MS-DOS diskettes in a way that is quite different from the way Apple programs are kept on Apple diskettes. This is why an MS-DOS system cannot read Apple diskettes (and vice versa) without a product like Trackstar.

In order to store Apple programs on your MS-DOS disks you must reserve a special place for them. This special place, which can be recognized by both the Apple and MS-DOS systems, we will call *TrackStore*. A *TrackStore* file or "disk" is an imitation of an Apple floppy disk on an MS-DOS file.

First, some numbers: An Apple 5.25" diskette can hold up to 140K (142,000 characters) of information. An MS-DOS floppy diskette can hold 360K to 1,440K of information depending on its type.

A hard disk drive can contain 10 to 80 million (or more) characters.

In preparation for storing the contents of an Apple diskette on an MS-DOS drive, we reserve an area 266K long on your MS-DOS disk. This will contain all of your Apple data and formatting information. This reserved area is the *TrackStore* disk. When we copy all of the files from one of your Apple diskettes into the *TrackStore* area, you will be able to run Apple programs from it just as if it were an Apple diskette.

You can have as many *TrackStore* disks on your MS-DOS system as you have room for. This will typically be two on a 720K diskette, four on a 1,200K (1.2Mb) drive, and many on a hard disk.

Your PC recognizes the *TrackStore* area as an MS-DOS data file. It can be copied, moved, and archived just like any other data file. The one thing the MS-DOS system cannot do by itself is to use the contents of the *TrackStore* disk.

You will give each of your *TrackStore* disks a unique name. This name can be one to eight characters long and will serve to identify it to the Trackstar system. It will be stored on the MS-DOS disk under that name with the suffix **.APP**.

For example you might have a *TrackStore* disk called **GRAPHICS**. It would be stored in MS-DOS as a 266K file called **GRAPHICS.APP**. Within **GRAPHICS.APP** would be the contents of an Apple diskette.

The Trackstar system allows you to assign an additional 46 character description to the *TrackStore* disk at the time it is created. You can use these 46 characters to help you remember the contents of specific diskettes. This is especially useful when you have dozens of *TrackStore* disks on a hard disk.

## About Apple Diskettes

In order for you to get the most utility from the *TrackStore* concept it will be useful to cover a few details on the workings of floppy disks. This section is particularly important if you will be storing copy protected software on your hard disk.

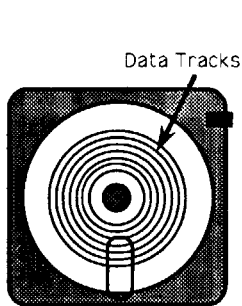


Figure 6-1

Information is stored on a floppy diskette in a fashion similar to that used by audio or video tapes. This information is stored in concentric rings around the circumference of the diskette; each of these rings is called a **Track**. See Figure 6-1

Since each Track must be a certain distance away from its neighbors, an Apple diskette can contain only 40 such Tracks. During the early days of Apple computers, a clever programmer figured out that he could prevent other people from copy-

ing his software by placing these Tracks at other than the standard positions.

Since the only other place Tracks could be placed was halfway between the standard Track locations the practice became known as half-tracking. Placing a Track at location 1.5 meant that information could not be stored at locations 1 or 2 (too close to the other) so the maximum density of 40 Tracks was preserved.

TrackStore allows you the option of copying all possible half-tracks to an MS-DOS file. This uses double the usual space, but allows more programs to be copied to MS-DOS media.

When copying a protected diskette, it is difficult to tell which half tracks actually contain data. As you will see later in this Chapter you will have the option of copying all 80 tracks from a protected diskette to a TrackStore disk.

Only an Apple or Apple compatible drives are capable of reading data stored on half tracks.

### Creating a TrackStore Disk

To create a TrackStore disk you must first run the TSUTILITY program to access the Disk Utilities Menu. See Figure 4-1.

Options 3, 4, and 5 on this menu apply to TrackStore diskettes.

### The Disk Conversion Utility

The Disk Conversion Utility allows you to copy an Apple 5.25" diskette to a TrackStore disk on an MS-DOS drive. You must have an Apple or Apple compatible drive connected to your Trackstar to run this utility.

Most Apple programs can be copied to the TrackStore disk. Some programs are heavily copy protected and will not convert correctly. The conversion utility will be unable to tell if these programs did copy correctly. If you suspect a program has been copy protected in this way, you should attempt to run the copy. If the TrackStore copy fails to run, you will be limited to running that particular program from the Apple Drive.

Some copy protection schemes render the copy process unreliable. If the copy fails on the first attempt you may wish to try a second time before deciding the program will not copy at all.

*Before copying any software to a TrackStore disk, you should read the copyright notice accompanying the original software. Most publishers allow duplication to a hard disk for personal use by the purchaser; this may not be true in all cases. It is especially important if you are copying programs to a file server that many individuals have access to.*

After selecting Option 3 from the Disk Utility Menu, you will be asked the following questions:

**Target Drive (A/B/C/D/E/F) :**

The Target drive is the drive to which the Apple diskette will be copied. A TrackStore diskette will be created for the Apple information that will be stored on this drive.

Next you will be asked for the name of the Target Disk.

**Trackstore Disk Name : STARTUP1**

Enter a name for the new TrackStore disk now. You are allowed a maximum of eight characters. Pressing <enter> without specifying a TrackStore disk name will cause the name STARTUP1 to be used.

You may next enter a 46 character descriptive statement for the TrackStore disk.

**Trackstore Disk Description :**

This description may be any character string such as **AppleWorks Backup** or **Educational Game Disk**. Pressing <enter> without typing a description will leave this description blank.

The next question before the copy begins pertains to copy protection as described earlier.

**Trackstore Disk Density (40/80) :**

Pressing the 4 key here will result in the 40 regular tracks of the Apple diskette being copied to your new TrackStore disk. This will consume 266,240 bytes (roughly 265K) of space on your MS-DOS disk.

Pressing the 8 key here will result in all 80 possible tracks being copied, the 40 standard tracks and the 40 possible half-tracks. This will consume twice as much space on your MS-DOS disk.

If you suspect a program is half-track protected or if it does not work after a 40 track copy then use option 8.

*If a program is not half-track protected and an 80 track conversion is done, the program will still work correctly although this is wasteful of space.*

The copy will now proceed.

## New Blank Disk Allocation

The New Blank Disk Allocation Utility allows you to create an empty TrackStore disk. The information required is the same as for the Disk Conversion Utility above.

### **IMPORTANT:**

A newly created TrackStore disk is similar to a new, blank floppy diskette. It contains no information and must be formatted before it can be used. To format the TrackStore disk, you can use any Apple format utility; DOS 3.3 or ProDOS.

*If you try to access a new TrackStore disk without formatting it, an I/O ERROR message will appear.*

## Trackstar Disk Description Modification

When you convert an Apple disk into a TrackStore file or create an empty TrackStore disk, you have the option of entering a 46 character description of the disk. The Trackstar Disk Description Modification Utility allows you to change that 46 character description.

To change the description of a particular TrackStore disk, you must first specify the location of the MS-DOS drive on which that TrackStore disk is stored.

### **Target Drive (A/B/C/D/E/F) :**

The system will now list all of the TrackStore disks stored on the specified drive. See Figure 6-2.

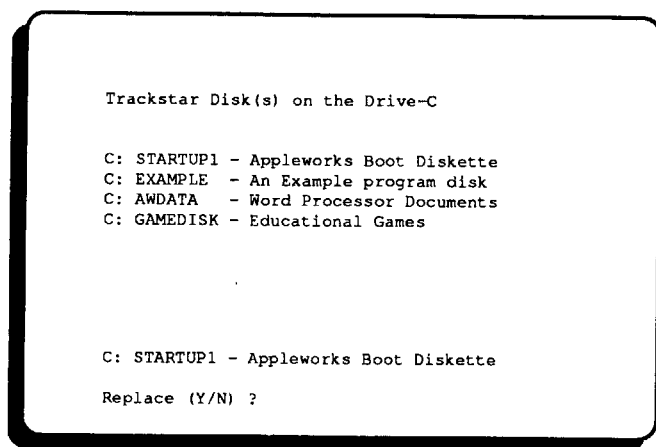


Figure 6-2

You may select the *TrackStore* disk whose description you would like to change by using the up and down arrow keys. The selected *TrackStore* disk will be displayed in inverse video.

While a *TrackStore* disk is selected, you may enter a new description by typing over the old one. Press the <enter> key to finish the description.

*Pressing <esc> will end the entry and return you to the Disk Utility Menu.*

After you have finished changing the disk description by pressing <enter>, you will be asked to confirm the change.

### **Replace (Y/N)?**

Pressing Y will replace the old description with the new. Pressing N will cancel the change.

You may now modify more *TrackStore* disk descriptions. You must press the <esc> key to return to the Disk Utility menu.

## Changing the *TrackStore* disk name

You will recall from an earlier section that *TrackStore* disks are stored on an MS-DOS diskette as a one to eight character file name plus the suffix **.APP**. If you wish to change the name of the *TrackStore* disk itself, you must use the **RENAME** command from within MS-DOS. Once it is created you cannot change the *TrackStore* disk name from within the Trackstar system. Trackstar will only recognize MS-DOS filenames with a **.APP** suffix as *TrackStore* media. Please refer to your MS-DOS users manual for more information on the **RENAME** command.

## Copying Apple Diskettes to Apple Diskettes

As was mentioned earlier, only the External Apple Drive is capable of reading and writing Apple formatted 5.25" diskettes. If you wish to run a program or read a file created on an Apple computer you must do so using the Apple compatible drive. Likewise, if you want to create a disk on your Trackstar that can be read on an Apple computer you must create that disk on your External Apple Drive.

As long as the External Apple Drive is configured as either Apple drive D1 or D2 you can use any Apple copy routine to duplicate *from* an Apple diskette *to* an Apple diskette. You must follow the instructions supplied with the copy program. You must refer to the section within those instructions on Single Drive Copy.

## Copying *TrackStore* disks to Apple Diskettes

It is also possible to copy the contents of a *TrackStore* disk back to an Apple diskette in the External Apple Drive.

Before you do this, you must keep the following points in mind:

40 track *TrackStore* disks may be copied back to an Apple diskette without restriction using any Apple copy program.

80 track *TrackStore* disks may also be copied; however, you must use an Apple copy program capable of copying half-tracked software. Half-tracked software is by definition copy protected. The result of attempting to copy this type of software is not guaranteed.

## Copying TrackStore disks to TrackStore disks.

Much the same restrictions apply to copying from one TrackStore disk to another TrackStore disk as apply to copying from TrackStore to Apple.

A destination TrackStore must already exist. This can be an existing disk or one newly created using the Disk Utilities menu.

40 track disks may be copied without restriction using any Apple copy program.

80 track disks may be copied using an Apple copy program capable of copying half-tracked software. The result of this type of copy is also not guaranteed.

*Remember that a TrackStore disk is actually an MS-DOS type file with the suffix **APP**. From MS-DOS you can use any copy utility to duplicate TrackStore disks with no loss of information. This is true of both 40 and 80 Track TrackStore disks.*

## Selecting a TrackStore disk

Once you have created several (or many) TrackStore disks on a particular MS-DOS drive, you need some way to select between them.

For example; Suppose you have designated your drive C: (a hard disk, say) as Apple drive D2. Your hard disk may contain 10 or 15 or more TrackStore disks. Now you want to CATALOG or list the contents of the "Apple disk" now in Apple drive D2.

How does the system know which of the 10 or 15 TrackStore disks available is the one you really wish to see?

The answer to this is in the **Switch Disk** feature.

## Switch Disk Explained

Remember the Trackstar Help Menu from Chapter Two? Pressing <F1> followed by <esc> while using an Apple program will display this menu. See Figure 5-1.

Within the Trackstar help menu there are two Switch Disk options:

**[1] Switch Disk 1**    *(Apple Drive D1)*

**[2] Switch Disk 2.**    *(Apple Drive D2)*

**Switch Disk 1** will allow you to select and switch between multiple TrackStore disks that may be contained on the MS-DOS drive defined earlier as Apple drive D1.

**Switch Disk 2** will allow you to select and switch between multiple TrackStore disks that may be contained on the MS-DOS drive defined earlier as Apple drive D2.

Press 1 or 2 to select a TrackStore disk from the specified MS-DOS drive.

*If you attempt to use "Switch Disk" on an Apple disk drive, it will have no effect.*

When Switch Disk is selected all TrackStore disks contained on the specified MS-DOS drive will be displayed. See Figure 6-3

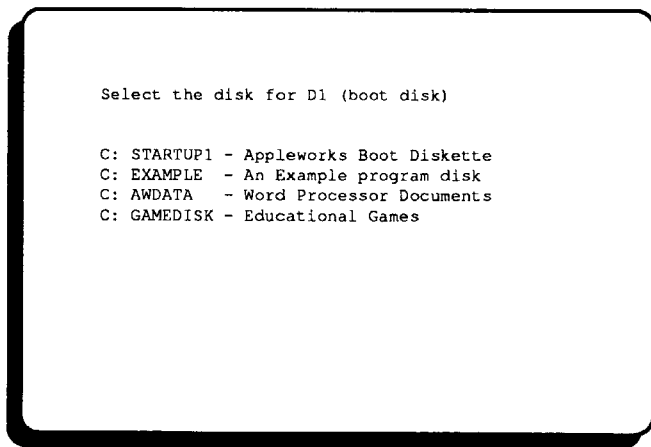


Figure 6-3

You may select a TrackStore disk using the arrow keys. Using the arrow keys, select the TrackStore disk you wish to use and press <enter>.

Those of you familiar with the Program AppleWorks will recognize the following example:

AppleWorks requires three diskettes: A boot diskette (used only once), a program diskette, and a data diskette.

In an Apple computer, the boot diskette must first be placed in Apple drive D1 and started. AppleWorks will partially load and then request that the Boot disk be removed and replaced with the Program disk in Apple drive D1. You can then press the <enter> key and AppleWorks will begin.

In the Trackstar system, if you have previously copied each AppleWorks diskette to a corresponding TrackStore disk on an MS-DOS drive, you would use the following procedure:

- 1) Place the MS-DOS disk containing the TrackStore copies of AppleWorks into the drive previously assigned as Apple drive D1.
- 2) Use [1] Switch Disk to select the specific TrackStore disk containing the AppleWorks Boot.
- 3) Still at the Trackstar Help Menu press the B key to reboot Trackstar from the disk assigned to Apple drive D1 (the AppleWorks boot disk).

The system will boot. AppleWorks will then display the message *Insert the AppleWorks Program Diskette in Drive 1 and Press RETURN.*

- 4) Press <F1> followed by <esc> to return to the Trackstar Help Menu.
- 5) Use [1] Switch disk to select the specific TrackStore disk containing the AppleWorks Program.
- 6) Press <enter> to return to the Apple display.
- 7) Press <enter> again to indicate that you have placed the AppleWorks Program diskette in drive 1.

AppleWorks will now finish booting. You can now use [2] Switch Disk to assign an AppleWorks data disk to Apple Drive D2.

## Booting the system from a *TrackStore* disk

It is not always necessary to boot the Trackstar system from a disk in the External Apple Drive. If you have previously copied Apple diskettes to *TrackStore* diskettes on your MS-DOS floppy diskettes, hard disk drive, or network file server, you can boot your Trackstar System directly from there, without first using an Apple diskette.

The first step in booting from a *TrackStore* disk instead of the Apple Drive is to use the **TSUTILITY** program to assign an MS-DOS drive as Apple Drive D1. This MS-DOS drive can be any drive including a hard disk or file server.

The Trackstar System will always boot from the disk in drive D1.

There are three special names reserved for *TrackStore* disks. These names are **STARTUP1**, **STARTUP2**, and **INIT**.

If you have a *TrackStore* disk named **STARTUP1** in Apple drive D1, then that *TrackStore* disk will be automatically selected when you boot from that drive. If there is no *TrackStore* disk named **STARTUP1** on Drive D1 you will be asked to select one from the **SWITCH DISK** menu as shown in Figure 11.

You can, if you wish, boot from a *TrackStore* disk other than **STARTUP1**. To do this, use the **SWITCH DISK** menu to select another disk prior to booting. The last *TrackStore* disk selected from the **SWITCH DISK** menu (for drive D1) will be the one used during the Apple boot process.

**STARTUP2** performs the same function of being selected as the default data disk for Drive D2.

Now, If you have configured your Trackstar such that your hard disk is Apple Drive D1 and you have a *TrackStore* disk on that drive named **STARTUP1**; then, when the **STAR.COM** program is run the Trackstar system will be started from the *TrackStore diskette* **STARTUP1** on your MS-DOS hard disk.

**INIT** is the *TrackStore* diskette from which **FPBASIC** can be loaded as specified during system configuration. Refer to Chapters Three and Four for a review of **FPBASIC** and **INIT**.

## Booting from a large ProDOS volume

In Chapters Three and Four it was discussed how you might create large ProDOS volumes for use with your Trackstar system. If you have created such a large ProDOS volume, you will be offered the option of booting from that volume when the Trackstar system is initialized. If you select this option the Trackstar system will be started from the program `STARTUP.SYSTEM` located in the root directory of that ProDOS volume.

Please refer to your ProDOS users manual for more information on the booting process.

---

## Chapter Seven

# Features and Functions

### Using Apple Printers

Apple computers have slots for controller cards similar to the slots in your PC where the Trackstar is connected. In an Apple computer, cards are placed in these slots to interface with a printer that is attached to the system. There are eight of these slots numbered from zero to seven in an Apple II computer. There are seven slots in an Apple //e numbered one through seven. An Apple //c has no slots but uses the same convention as the other machines.

When an Apple program sends text to a printer, it addresses that printer by the number of the slot that its controller is plugged in to, i.e. you must tell each Apple program which slot contains the controller card that drives your printer. If you had two printers on an Apple computer, with their controllers in slots one and two, you would select a specific printer by instructing the program to use either slot number one or slot number two.

Most Apple programs have a Setup Menu that allow the user to select the slot number, Controller Card, and Printer.

The Trackstar has (as far as programs are concerned) two slots for printers. These two slots are slot number one and slot number two.

*The Apple DOS 3.3 commands PR#1, PR#2, IN#1, and IN#2 access these two slots.*

Since the Trackstar itself has no slots for controller cards, it uses the printer ports on the PC for that purpose.

Your PC has two kinds of connectors for printers: parallel and serial. Parallel printers are addressed in MS-DOS as an LPT type device. Serial printers are addressed as an MS-DOS COM type device. Please refer to your Owners Manual for a complete description of printers.

The Trackstar uses slot number one to control a parallel printer connected to an LPT port.

Trackstar slot number two is for controlling a serial printer connected to a COM port

A brief technical note regarding data length: When an Apple program sends a character to the printer, the seventh bit is always set. When MS-DOS sends a character to the printer, the seventh bit is always cleared. The data bit length will be set at Eight in most circumstances. If problems occur with graphics printing, it may be necessary to change the data length to seven.

## General comments on Trackstar I/O

Apple DOS and Apple ProDOS use certain conventions when directing output to a printer or requesting input from some other peripheral device. The Trackstar supports these conventions and will work correctly with any Apple program that uses these same methods.

To increase speed some programs bypass these programming conventions and attempt to access the Apple serial or parallel cards directly. These programs will not work correctly with the Trackstar.

Telecommunications programs or any program designed to use a modem are examples of software that may exhibit this problem.

## The Apple Game Port

The Trackstar supports the Apple game port. This port can be used with an Apple //c joystick or any Apple game device equipped with a nine pin D type connector.

Annunciator ports one through three are not supported by the Trackstar Game I/O. This is a little used Apple feature and will not interfere with the operation of Apple joysticks or game paddles.

## Telling Time

The Trackstar system will use the MS-DOS System Clock in your PS/2 to provide the time to Apple programs that use it. The Trackstar clock is located in "Slot 5" of the system and is Thunderclock compatible.

## Doubling your speed

An Apple // series computer runs at a clock speed of 1 Megahertz. The Trackstar, true to its Apple emulation, also normally runs at the same 1 Mhz.

Holding down the <Alt> key while pressing the 2 key will double the speed of your Trackstar Plus to 2 Mhz. Doubling the Trackstar speed will result in vastly decreased running times for programs that perform many calculations.

Holding down the <Alt> key while pressing the 1 key will return the Trackstar to 1 Mhz operation.

*Musix programs may sound different when run at 2 Mhz and game programs may become too fast to play.*

The function of these keys may be reviewed at any time by pressing the K key while in the Trackstar Help Menu.

## Switching to MS-DOS

You will remember from Chapter Five that you can switch from the Trackstar system to the MS-DOS system by using the Trackstar Help Menu. The Trackstar Help Menu is accessed by pressing <F1> followed by <esc>.

While in the Trackstar Help Menu you can press the X key to return to MS-DOS. At this time you will be given an option: Press the Y key to terminate the Trackstar operation, stop any running Apple program, and return to MS-DOS, or Press the N key to cancel this option and return to the Trackstar System.

Once you have returned to MS-DOS in this fashion you must execute the STAR.COM program to re-enter the Trackstar System.

An alternative method of switching between Apple and MS-DOS systems can be used by holding down the <alt> key while pressing <esc>.

If you are using the Trackstar System when you hold down <alt> and press <esc> you will be switched to the MS-DOS system. You can now use your MS-DOS system as if the Trackstar were not present. Any running Apple program will continue to run until an I/O request is made. It will then suspend until Trackstar mode is re-entered.

Holding down the <alt> key and pressing <esc> again will return you to the Trackstar System.

You can perform this operation as many times as you like.

*While the Trackstar system is running it uses about 80K of the memory in your PC.*

## Programming the Function Keys

Trackstar allows you to program the function keys on the PC keyboard for your convenience. To do so, you must run the TSUTILITY program and select Option 2, Function Key Programming, from the Main Menu. The Function Key menu will be displayed on the screen: See Figure 7-1.

The following key strings will be entered when the function keys are pressed in Trackstar Mode.

```
[F3 ] : CATALOG, D1^M
[F4 ] : BRUN
[F5 ] : LOAD
[F6 ] : LIST^M
[F7 ] : SAVE
[F8 ] : RUN HELLO^M
[Quit] : Exit the program
```

Use the up/down arrow keys and press the <Enter> key to select a function key to program.

Figure 7-1

There are 6 function keys available for programming, F3 through F8. Keys F1, F2, F9 and F10 are dedicated to control key functions, and cannot be programmed by the user.

You may select the [Quit] option to return to the previous menu

Use the arrow keys to select the function key you wish to modify, press the <enter> key, and then type the selected characters, words, or commands. The definition can have up to 32 characters, including <enter>.

When you have finished typing in your modified key definition, press the <END> key to return to the menu. You may then choose to modify another key, or select the [Quit] option to return to the Main Utility menu.

These Function Key definitions are maintained in the STAR.COM program used to initialize the Trackstar system. If you wish to maintain several sets of Function Key Definitions you may do so by configuring multiple copies of the STAR.COM program, giving each copy of the program a different name.



---

## Chapter Eight

### File Transfer

#### About File Transfer

This feature of your Trackstar system allows you to move data from your Apple system to the MS DOS system. Data created on an Apple computer can be used in MS DOS programs and vice versa. For example, spreadsheets created in AppleWorks can be used by Lotus 1 2 3. The possibilities are many and each enhances the utility of your Trackstar.

Any text or Binary file can be transferred. Data not in a text or binary format can be transferred only after it has been converted to text or binary.

Most programs keep their data in a text file format so performing the conversion is a straightforward process. Some programs, notably AppleWorks, keep their data in an internal format that cannot be read or used by other software. These programs usually provide a way of creating a text file output for their data. In AppleWorks, the PRINT feature will allow you to print the contents of a document to a disk file as if it were being sent to a printer. This disk file is in a text format and can be used by the Trackstar File Transfer Utility. Programs written in the BASIC language can be transferred in a similar fashion.

Two programs are provided on the Trackstar Utility Disk for the purpose of File Transfer. The first program is used to transfer data to and from Apple DOS 3.3 disks and the second program serves the same function for ProDOS files.

Both Programs will transfer files from Apple formatted diskettes to any MS DOS volume. The External Apple Disk drive must be configured as Apple Drive D1 for File Transfer to work.

#### Apple DOS 3.3 File Transfer

The DOS 3.3 File Transfer Utility is kept in a TrackStore disk called FILETRAN. This TrackStore disk is contained on the Trackstar Utility Disk. You can use the SWITCH DISK command to access this program.

Before you can use the File Transfer Utility, you must first copy it to a bootable DOS 3.3 diskette.

The DOS 3.3 File Transfer program itself is called FILE TRANSFER. It is an Apple binary program and may be copied to the Apple 5.25" diskette using the program FID. FID is a file copy utility contained on the Apple DOS 3.3 Master Diskette supplied by Apple. If you do not have a copy of the DOS 3.3 Master you can use one of the many other copy programs that can copy individual files.

Before you begin make, sure that:

- 1) The FILE TRANSFER program is on an Apple DOS diskette.
- 2) The External Apple Drive is configured as Apple Drive D1.

## Starting the Program

Now that the FILE TRANSFER program is on an Apple DOS diskette in drive D1 we are ready to begin.

At the Apple prompt type: **BRUN FILE TRANSFER** <enter>

The File Transfer menu will appear on the screen: See Figure 8-1.

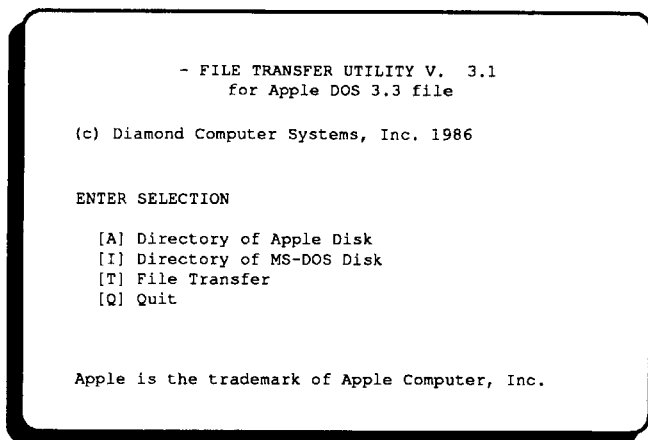


Figure 8-1

Selecting Option [A] from this menu will display a catalog of all Apple programs contained on the Apple diskette in the compatible drive. You can use this option to verify that the programs you wish to transfer to MS DOS are on the disk. It can also be used after a file transfer from MS DOS to verify that the programs did transfer as expected.

Option [I] will perform the same function of listing files on an MS DOS disk or volume. You will be asked to specify the letter of the MS DOS drive you wish to see a directory of.


Only files in the selected directory or subdirectory of the specified drive will be displayed. You can only transfer files to or from the currently selected MS DOS subdirectory.

Option [Q] will exit the File Transfer Utility. You must re-boot from an Apple diskette when you exit the File Transfer Utility.

Option [T] will begin the file transfer process.

When Option [T] is selected you must supply the information requested in Figure 15.

Figure 15 is a composite screen composed of all of the questions to be answered. Each question will appear on the screen in order, from top to bottom.

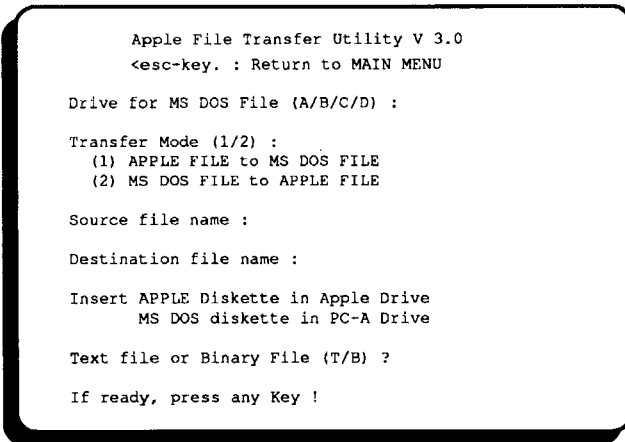

```
Apple File Transfer Utility V 3.0
<esc-key. : Return to MAIN MENU

Drive for MS DOS File (A/B/C/D) :

Transfer Mode (1/2) :
(1) APPLE FILE to MS DOS FILE
(2) MS DOS FILE to APPLE FILE

Source file name :

Destination file name :

Insert APPLE Diskette in Apple Drive
MS DOS diskette in PC-A Drive

Text file or Binary File (T/B) ?

If ready, press any Key !
```

Figure 8-2

Note: at this time an Apple diskette must be in Apple drive D1.

**Question A: Drive for MS DOS File (A/B/C/D):**

Please specify the drive that MS DOS files are going to be copied to or from. This can be any drive A, B, C, or D. You may use a hard disk, floppy disk, or file server as a MS-DOS drive.

**Question B: Transfer Mode (1/2) :**

**(1) APPLE file to MS DOS file**

**(2) MS DOS file to APPLE file**

You may specify, at this time, in which direction the File Transfer will go. Entering 1 will copy files from the Apple diskette to an MS DOS disk. Entering 2 will transfer files from an MS DOS disk to an Apple diskette.

**Question C: Source File Name :**

Please specify the name of the file you wish to transfer. To Transfer all files on the source diskette enter the wildcard \*.\* as the source file name.

There are several important points about file names that need to be understood here. Apple file names may be much longer than MS DOS file names and can contain characters that are not allowed by MS DOS. It is up to the user to verify that illegal characters are not contained in the Apple file names. If an illegal file name is encountered during the file transfer, an error message will be generated and the transfer will stop. If you limit yourself to letters and numbers in a file name with the first character being a letter you will not encounter this problem.

Apple file names can be up to 30 characters long. MS DOS file names may be only eleven characters in length (including the suffix). When transferring an entire Apple disk to MS DOS, the file names will be limited to eleven characters. The first eleven characters of each Apple file name will be used to create the new MS DOS files. If two Apple files have file names with the first eleven characters the same, only the second file will be transferred.

When executing a File Transfer from MS DOS to Apple, the full filename is converted and no illegal character conflicts will occur.

**Question D: Destination file name :**

If you wish to supply a different name for the transferred file you may do so here. If you press <enter> without specifying a new file name, the old name will be used as described above. If you specified a wildcard (\*.\*) as the source file, then press the <enter> key in response to this question.

### Question E: **Text file or Binary file (T/B)?**

This question will only be asked when transferring a file from MS DOS format to Apple format. Pressing the T key will make the newly created Apple file a text file. Pressing the B key will transfer the data as a binary file.

When ready, press the <enter> key to begin the File Transfer. Pressing the <esc> key at any time will stop the transfer and return you to the File Transfer main menu.

### A Few Technical Points

When copying TEXT files from Apple DOS 3.3 to MS DOS:

- a) Bit 7 of the ASCII text is cleared.
- b) Carriage Return code (hex 8D) is converted to Carriage Return (hex 0D) and Linefeed (hex 0A).
- c) End Of File mark for Apple DOS 3.3 (hex 00) is converted to Control Z (hex 1A).

When copying TEXT files from MS DOS to Apple DOS 3.3

- a) Bit 7 of the ASCII text is set.
- b) Linefeed code (hex 0A) is ignored
- c) MS DOS End Of File mark (hex 1A) is converted to Apple End Of File (hex 00).

Random Access text files cannot be transferred.

When copying BINARY files from Apple DOS 3.3 to MS DOS

- a) The first two bytes of the Apple binary file, the "start address", are removed.
- b) The second two bytes of the Apple binary file, the length of the binary file, are removed.
- c) The rest of the file is transferred without any conversion.

When copying BINARY file from MS DOS to Apple DOS 3.3

- a) Two bytes (HEX 00, HEX 10) are added at the beginning of the file. These indicate the start address (HEX 1000) of the binary file. The file will be loaded at the address HEX 1000.
- b) Two more bytes are added, indicating the length of the binary file.
- c) The rest of the file is transferred without any conversion.

## Apple ProDOS File Transfer

The ProDOS File Transfer Utility is kept in a *TrackStore* disk called FILETRAN. This *TrackStore* disk is contained on the Trackstar Utility Disk. You can use the SWITCH DISK command to access this program.

A copy of the Apple ProDOS Utility disk is required to run the Trackstar File Transfer Utility.

Before you can use the File Transfer Utilities you must first copy them to the 5.25" Apple ProDOS Utility Diskette.

The ProDOS File Transfer utility itself is composed of two programs; one program called TRANSFER and the other BTRANSFER. Both programs must be copied to the ProDOS Utility diskette before the File Transfer can begin. To copy the files from the FILETRAN disk to the disk in the Apple External Drive you should use the ProDOS Utility Disk supplied by Apple. Please refer to the manual accompanying the Apple ProDOS Utility Disk for complete instructions on file copy.

Before you begin, make sure that:

- 1) The TRANSFER and BTRANSFER programs are on the ProDOS Utility diskette.
- 2) The External Apple Drive is configured as Apple Drive D1.

### Starting the Program

Now that the FILE TRANSFER programs are on the ProDOS Utility diskette in drive D1 we are ready to begin.

You can start the ProDOS File Transfer Utility from within the Apple ProDOS Utility Program:

From inside the ProDOS Utility's FILER Menu select the **QUIT** option. When asked for a Pathname, type **TRANSFER**, then press the <enter> key.

From within ProDOS BASIC you can type **BRUN BTRANSFER** then <enter> to start the File Transfer Utility.

The ProDOS File Transfer menu will appear on the screen: See Figure 8-3.

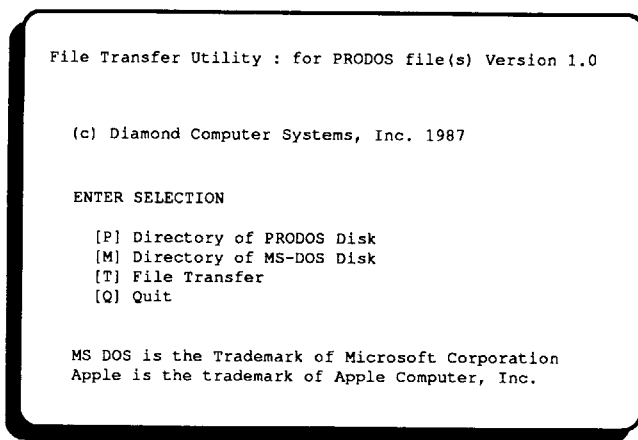


Figure 8-3

If you are copying data to MS DOS you should now place the Apple 5.25" diskette containing the information to be copied in the Apple External or 360K Drive. If you will be copying data from MS DOS place an empty, formatted diskette in the Apple External drive now.

Selecting Option [P] from this menu will display a catalog of all Apple programs contained on the Apple diskette in the External Apple Drive. You can use this option to verify that the programs you wish to transfer to MS DOS are on the disk. It can also be used after a file transfer from MS DOS to verify that the programs did transfer as expected.

Option [M] will perform the same function of listing files on an MS DOS disk or volume. You will be asked to specify the letter of the MS DOS drive you wish to see a directory of.

Only files in the selected directory or subdirectory of the specified drive will be displayed. You cannot transfer files to or from a subdirectory other than the one currently selected in MS-DOS.

Option [Q] will exit the File Transfer Utility. You must re-boot from an Apple diskette when you exit the File Transfer Utility.

Option [T] will begin the file transfer process.

## ProDOS to MS DOS

Figure 8-4 is a composite screen composed of all of the questions to be answered during a ProDOS to MS DOS transfer. Each question will appear on the screen in order, from top to bottom.

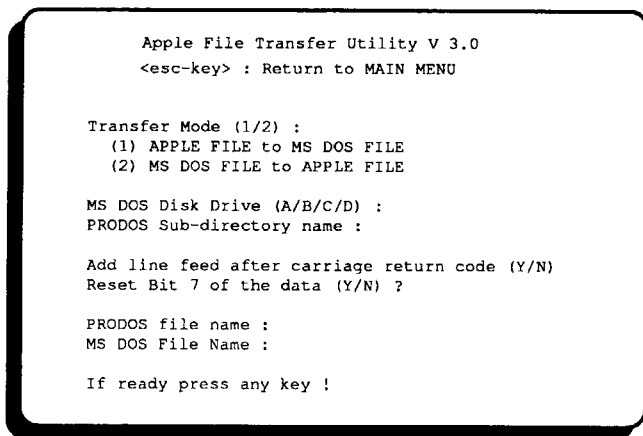


Figure 8-4

Note: at this time, an Apple diskette must be in Apple drive D1.

Question A: **Transfer Mode (1/2) :**  
**1. PRODOS file to MS DOS file**  
**2. MS DOS file to PRODOS file**

You may now specify in which direction the File Transfer will go. Entering 1 will copy files from the Apple diskette to an MS DOS disk. Entering 2 will transfer files from an MS DOS disk to an Apple diskette.

Question B: **MS DOS Disk Drive (A/B/C/D) :**

Please specify the drive that MS DOS files are going to be copied to or from. This can be any drive A, B, C, or D. You may use a hard disk, floppy disk, or file server as a MS DOS drive.

Question C: **PRODOS Sub-directory name :**

If you wish to copy data to or from a ProDOS sub-directory on the diskette in the External Apple Drive you may enter the name of that sub-directory now. If you do not wish to use a sub-directory, press the <enter> key before making an entry.

Question D: **Add line feed after carriage return code (Y/N) :**

This question, and the one following, are entirely application specific. In general, you should not add a line feed after carriage return, unless the destination program absolutely requires it.

Question E: **Reset bit 7 of the data (Y/N) :**

Again the answer to this question is application specific. In general do not reset bit 7 of the data unless the destination program requires it.

If for any reason the transferred data appears unreadable, and there appears to be no reason for it to be so, then adding linefeeds and resetting bit 7 may be useful.

Question F: **PRODOS file name :**

Enter the name of the ProDOS file to be transferred to MS DOS.

Question G: **MS DOS file name :**

Enter the name that you want the destination file to be called. If you press the <enter> key here without specifying a filename then the first eight characters of the ProDOS file name will be used.

When ready press the <enter> key to begin the File Transfer. Pressing the <esc> key at any time will stop the transfer and return you to the File Transfer main menu.

## MS DOS to ProDOS

Figure 8-5 is a composite screen composed of all of the questions to be answered during a ProDOS to MSDOS transfer. Each question will appear on the screen in order, from top to bottom.

Note: at this time an Apple diskette must be in Apple drive D1.

Question A: **Transfer Mode (1/2) :**

- 1. PRODOS file to MS DOS file**
- 2. MS DOS file to PRODOS file**

You may now specify in which direction the File Transfer will go. Entering 1 will copy files from the Apple diskette to an MS DOS disk. Entering 2 will transfer files from an MS DOS disk to an Apple diskette.

```
Apple File Transfer Utility V 3.0
<esc-key> : Return to MAIN MENU

Transfer Mode (1/2) :
(1) APPLE FILE to MS DOS FILE
(2) MS DOS FILE to APPLE FILE

MS DOS Disk Drive (A/B/C/D) :
PRODOS Sub-directory name :

Delete line feed after carriage return code (Y/N)
Set Bit 7 of the data (Y/N) ?

PRODOS file type :
1. TXT  2. BIN  3. ADB  4. AWP  5. ASP  6. PAS
7. CMD  8. SYS

PRODOS file name :
MS DOS File Name :
```

Figure 8-5

**Question B: MS DOS Disk Drive (A/B/C/D) :**

Please specify the drive that MS DOS files are going to be copied to or from. This can be any drive A, B, C, or D. You may use a hard disk, floppy disk, or file server as a MS DOS drive.

**Question C: PRODOS Sub-directory name :**

If you wish to copy data to or from a ProDOS sub-directory on the diskette in the External Apple or 360K Drive, you may enter the name of that sub-directory now. If you do not wish to use a sub-directory, press the <enter> key before making an entry.

**Question D: Delete Line feed after Carriage Return Code :**

This question, and the one following, are entirely application specific. In general, you should not delete the line feed after carriage return unless the destination program absolutely requires it.

Question E: **Set bit 7 of the data (Y/N) :**

Again, the answer to this question is application specific. In general, do not set bit seven of the data unless the destination program requires it.

If for any reason the transferred data appears unreadable, and there appears to be no reason for it to be so, then deleting linefeeds and setting bit 7 may be useful.

Question F: **PRODOS file type :**

**1. TXT 2. BIN 3. ADB 4. AWP 5. ASP 6. PAS  
7. CMD 8. SYS**

You must specify the type of file that you want the transferred ProDOS file to be. In practice you will only select type 1 TXT (text) or type 2 BIN (binary). Selecting any other file type will result in an unusable file.

Question G: **MS DOS file name :**

Enter the name of the MS DOS file to be transferred.

Question H: **PRODOS file name :**

Enter the name that you want the destination file to be called. If you press the <enter> key here without specifying a filename, the MS DOS file name will be used.

When ready, press the <enter> key to begin the File Transfer. Pressing the <esc> key at any time will stop the transfer and return you to the File Transfer main menu.



---

# Trackstar Installation for PS/2 Model 25

## APPENDIX A:

These installation directions are written for the **PS/2 Model 25** only. Owners of the **PS/2 Model 30** should use the directions in Appendix B.

This section contains diagrams of the components that will be used for installation. These diagrams should be studied carefully both before and during the installation process. Familiarity with each part will help significantly in installing the board.

Before you begin installation, the workspace should be clean and all the necessary parts and tools should be assembled. Please observe the following precautions:

- o All power to the computer should be turned off.
- o All cables should be disconnected.
- o All diskettes should be removed from the area.

Each step of the installation should be followed carefully.

### Equipment Used for the PS/2 Model 25

The following parts are used for the Model 25. Parts not shown in this diagram are used for the Model 30.

#### Trackstar Main Board


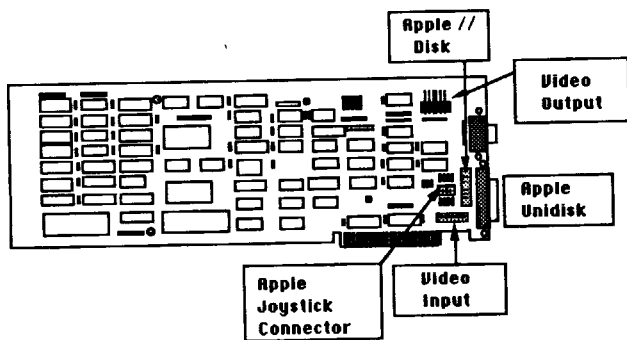



Figure 1



**Bracket for Apple Joystick Port (Model 25 only)**

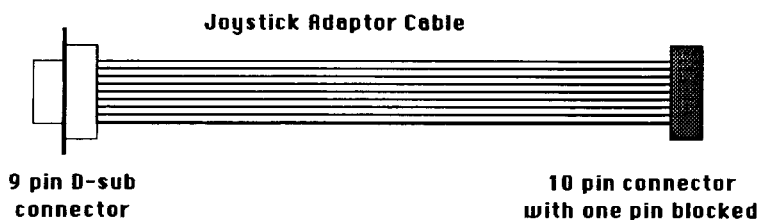

**Video Adaptor Cable (Model 25 only)**

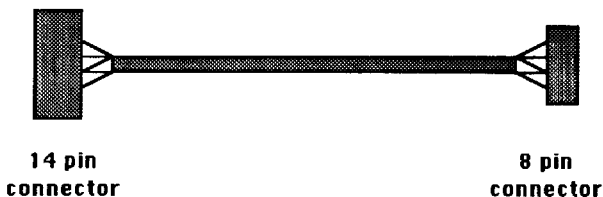

**Figure 2**

## **The Installation Procedure**

### **Pre-Installation Check:**

1. Before beginning these steps, please check to see that all power cords are disconnected, and all peripheral devices (such as printers, disk drives, etc.) are turned off and unplugged from the computer.
2. Place the PS/2 Model 25 with the screen facing down on a soft material, being careful not to scratch the face of the computer. Remove the two screws on the rear side of the computer, as shown below in Figure 3.
3. When the two screws are removed, pull the lower panel up and toward you. Now the computer main board will be visible. See Figure 4.

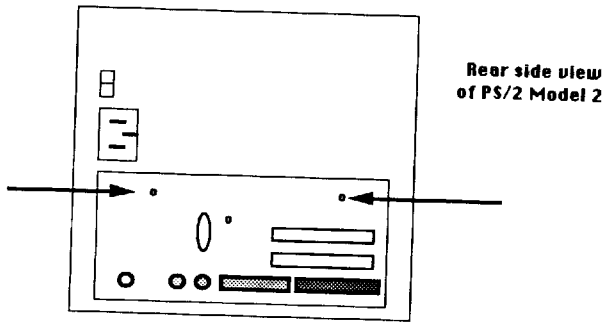


Figure 3

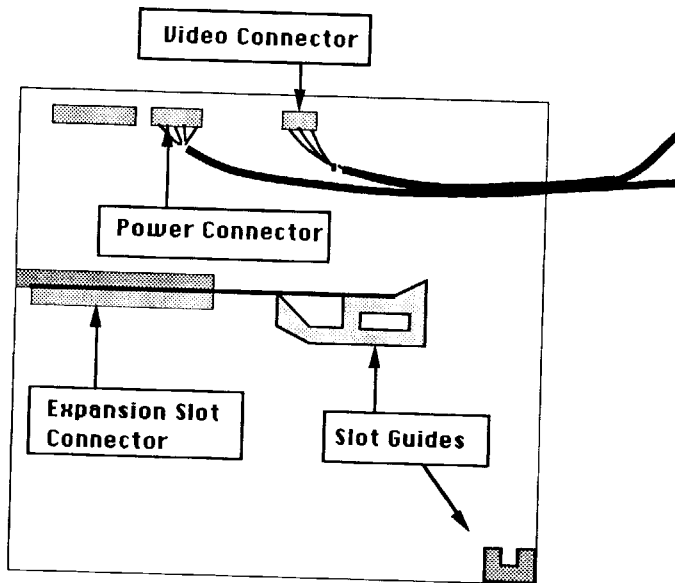


Figure 4

### Installing the Trackstar Board and Video Adaptor Cable:

1. Only the bottom slot can be used for the Trackstar board. Remove the empty bracket from the slot. Install the Trackstar board as shown below. The board should be latched by the slot guide. When the board is plugged into the slot, put the screw through the bracket of the board to the chassis. See Figure 5.

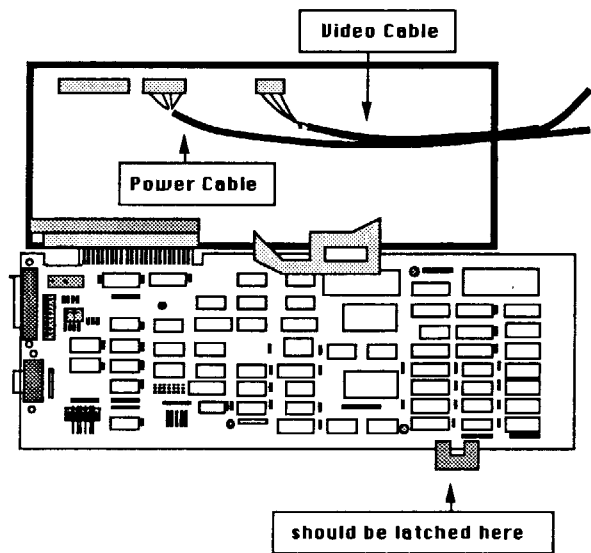


Figure 5

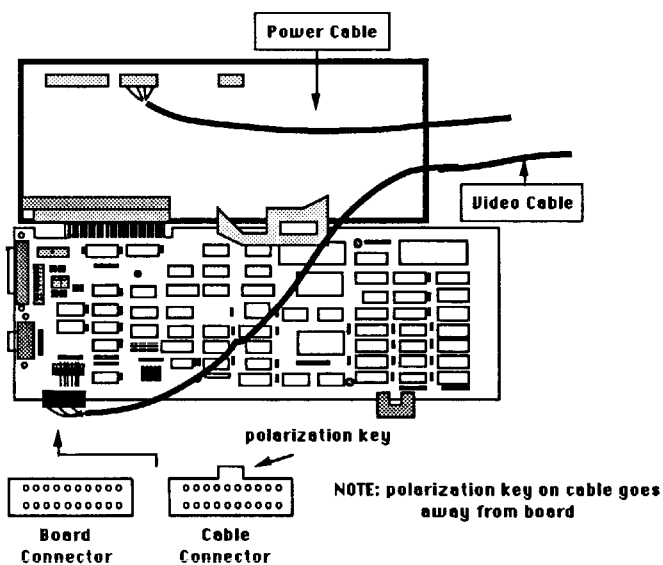


Figure 6

2. Separate the video cable from the power cable. They are tied together by wire wraps. Be careful not to cut any wires. Unplug the video cable from the main board. This will be connected to **J6** (Video Output Connector) of the Trackstar board last. Do not connect the cable to J6 yet. Be careful of the polarizations of all connectors: they can be connected only one way. See Figure 6.

3. Get the Video Adaptor Cable (see diagram of equipment above) and connect it between the main board Video Connector and **J4** (Video Input Connector) on the Trackstar board, as shown below. Be careful of the polarizations of the connectors: they can be connected only one way. See Figure 7

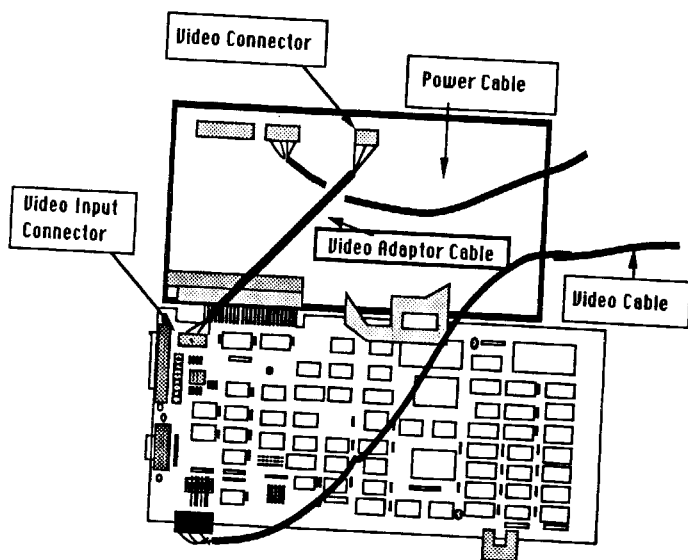


Figure 7

### Connecting an Apple Compatible Disk Drive:

1. Attaching a 5.25" Unidisk style Drive.

If the Unidisk drive is used, it should be connected *after* the Trackstar board is fully installed. See Figure 8.

## 2. Attaching a 5.25" Apple External Disk

If the Apple Disk II is used, it is easier to connect the drive *before* the Trackstar board is plugged into the slot. Pin 1 of the cable, which is normally a colored wire, should match with the pin 1 of the connector on the board. See Figure 9.

NOTE! Damage to the Computer, k drive, or Trackstar may result if this cable is attached improperly. Double check pin 1 alignment before turning the power on.

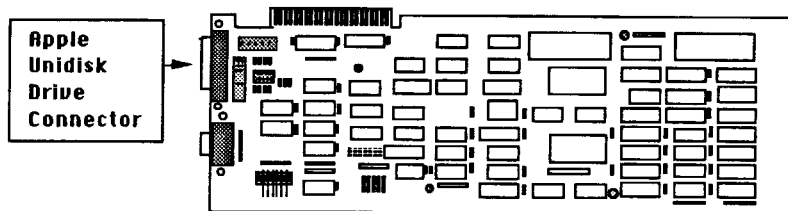


Figure 8


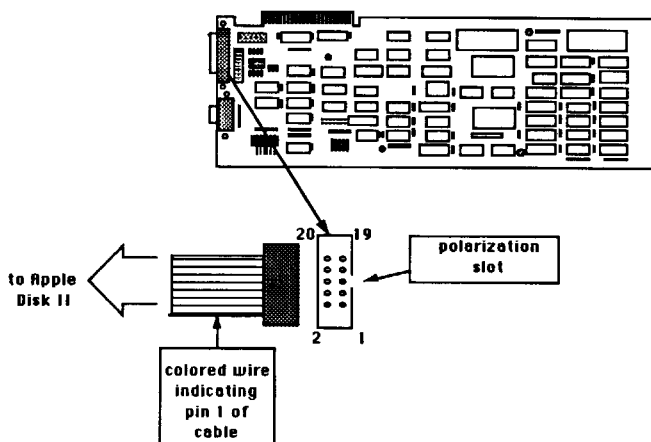


Figure 9

### Connecting an Apple Joystick Port:


1. *Gently* remove the metal slug attached to the computer (See Figure 10) using a regular screwdriver. This slot will be used to attach an Apple joystick port.

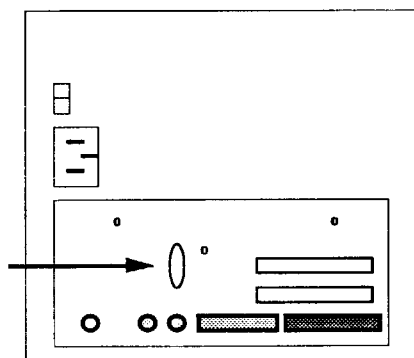

**Rear side view  
of PS/2 Model 25**

**Figure 10**

2. Attach an Apple joystick port (a 9-pin D-Sub connector) to the slot. It should go through the inside of the computer, with the connector facing out, as shown in Figure 11.

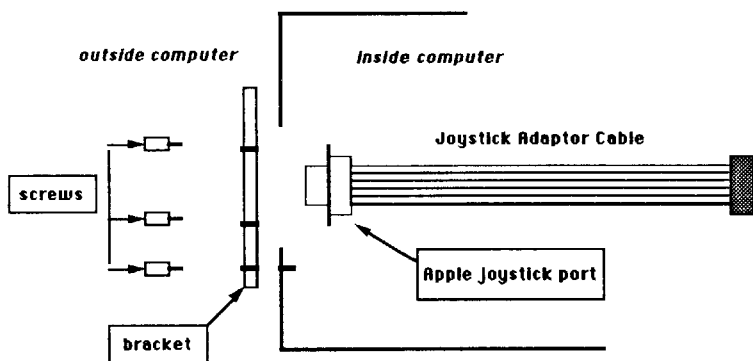

**Figure 11**

3. Attach the small bracket to the slot on the outside of the computer. Adjust the screw holes, then use the hexagonal screws to hold the connector tightly to the chassis.

4. Connect the other end of the Apple joystick adaptor cable to the **J1** connector of the Trackstar board. Pin 10 of the board connector is missing, and pin 10 of the cable connector is blocked, to ensure proper connection. See Figure 12.

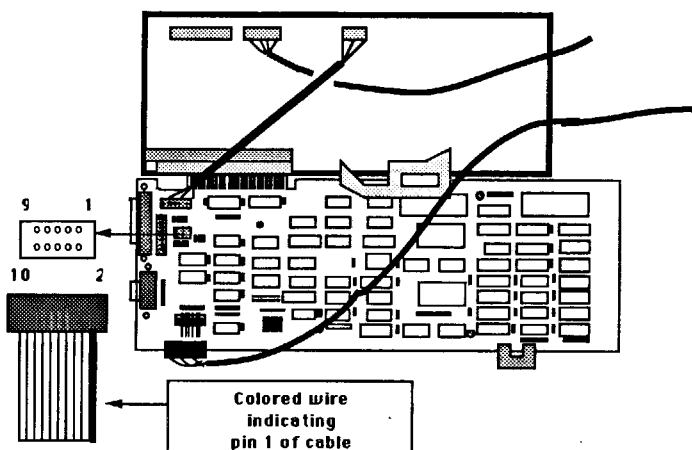


Figure 12

5. Connect the video cable from the computer to connector **J6** at this time. You must hold the back cover partially closed for the cable to reach. When the cable is properly connected you may finish closing the back of the computer.

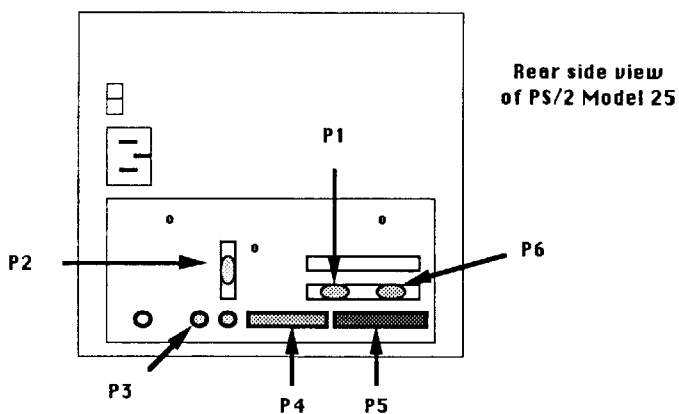


Figure 13

### **Connecting Outside Cables:**

When closing the back cover make sure that the chassis rails connect with the chassis pins. Secure the cover with the four screws removed earlier, and place the computer where you are going to use it. See Figure 3.

1. Connect devices to the following connectors:

- P1: Apple Unidisk Drive
- P2: Apple Joystick
- P3: Keyboard
- P4: Serial Communication Device
- P5: Parallel Communication Device
- P6: not used for the Model 25

See Figure 13.



---

## Trackstar Board Installation for PS/2 Model 30

### APPENDIX B:

These installation directions are written for the **PS/2 Model 30** only. Owners of the **PS/2 Model 25** should use the directions in Appendix A.

This section contains diagrams of the components that will be used for installation. These diagrams should be studied carefully both before and during the installation process. Familiarity with each part will help significantly in installing the board.

Before you begin installation, the workspace should be clean and all the necessary parts and tools should be assembled. Please observe the following precautions:

- o All power to the computer should be turned off.
- o All cables should be disconnected.
- o All diskettes should be removed from the area.

Each step of the installation should be followed carefully.

### Equipment Used for the PS/2 Model 30

The following parts are used for the Model 30. Parts not shown in this diagram are used for the Model 25.

### Trackstar Main Board


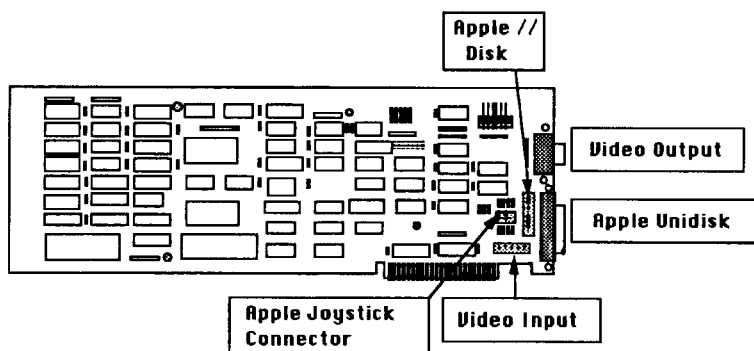


Figure 1

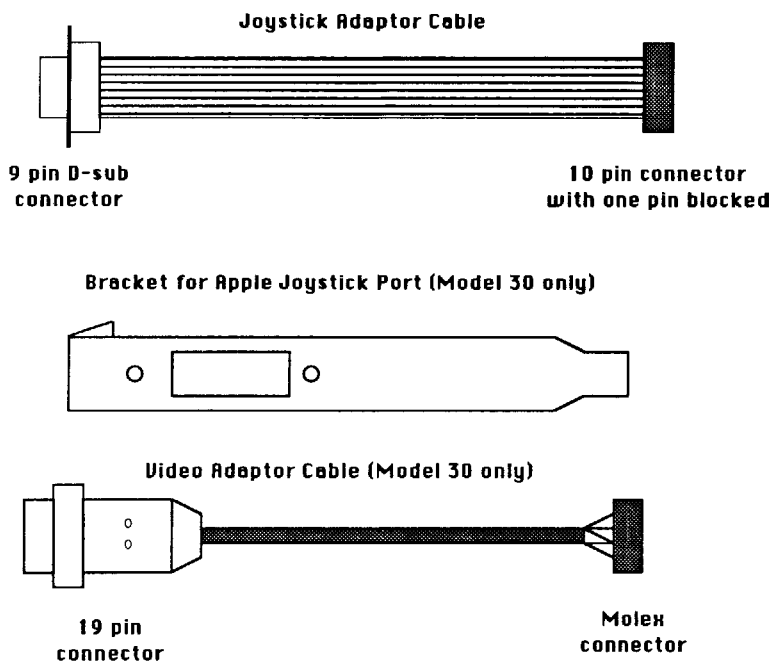

**Figure 2**

## **The Installation Procedure**

### **Pre-Installation Check:**

1. Before beginning these steps, please check to see that all power cords are disconnected, and all peripheral devices (such as printers, disk drives, etc.) are turned off and unplugged from the computer.
2. Remove the PS/2 Model 30 cover. This is attached by four screws, two on each side of the computer. When the screws have been removed, the cover may be removed by lifting it up.
3. Use the middle slot for the Trackstar board, and the top slot for the Apple joystick port. Remove the brackets from these slots.

### Connecting the Video Adaptor Cable and Trackstar Board:

1. Select the Video Adaptor Cable for the Model 30, as shown in Figure 2.
2. Feed the *molex connector* of the video adaptor cable through the opening of the middle expansion slot in the rear of the computer. See Figure 3.

Rear view of  
PS/2 Model 30

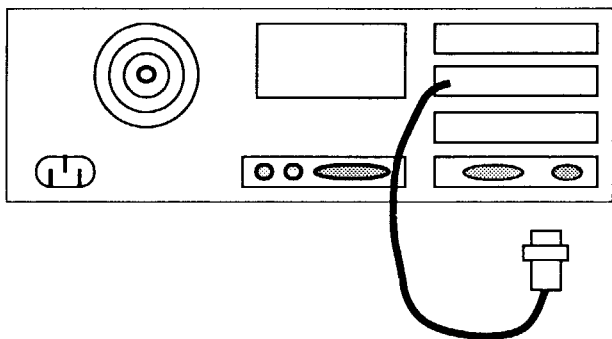


Figure 3

3. Connect the molex connector of the video adaptor cable to the *Video Input Connector* on the Trackstar board, as shown in Figure 4. The molex connector will only fit one way.

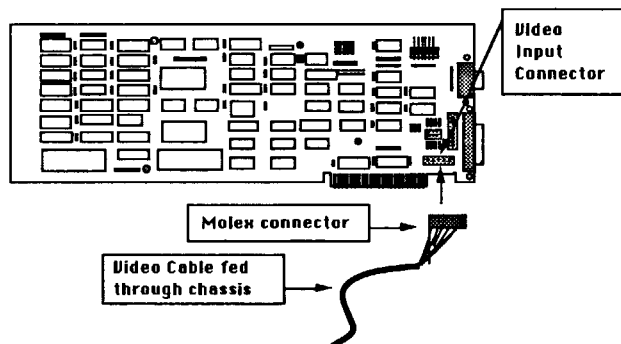


Figure 4

4. The video adaptor cable should be inserted through the bottom hole of the bracket just before the Trackstar board is plugged into the slot.

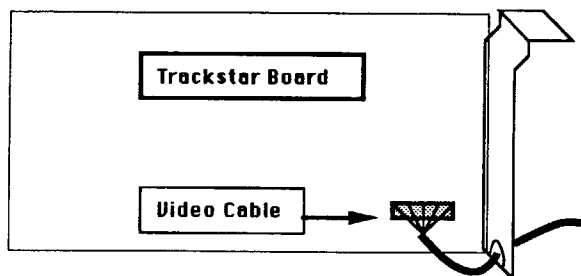


Figure 5

5. Plug the Trackstar board into the slot. Then, put the screw through the Trackstar board bracket to the chassis. See Figure 5.

### Connecting an Apple Disk Drive:

#### 1. Attaching a 5.25" Unidisk style Drive

If the Unidisk style drive is used, it should be connected *after* the Trackstar board is fully installed.

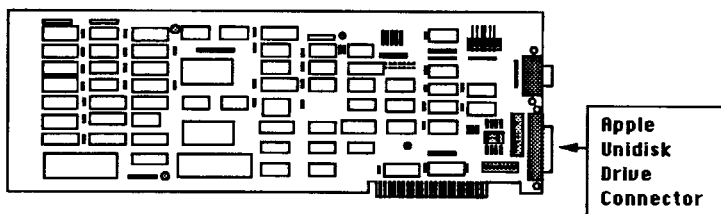


Figure 6

## 2. Attaching a 5.25" Apple Disk II style drive

If the Apple Disk II style drive is used, it is easier to connect the drive *before* the Trackstar board is plugged into the slot. Pin 1 of the cable, which is normally a colored wire, should match with the pin 1 of the connector on the board.

Note! Connecting this cable incorrectly may result in damage to the computer, disk drive, or the Trackstar. Double check the position of pin 1 before applying power.

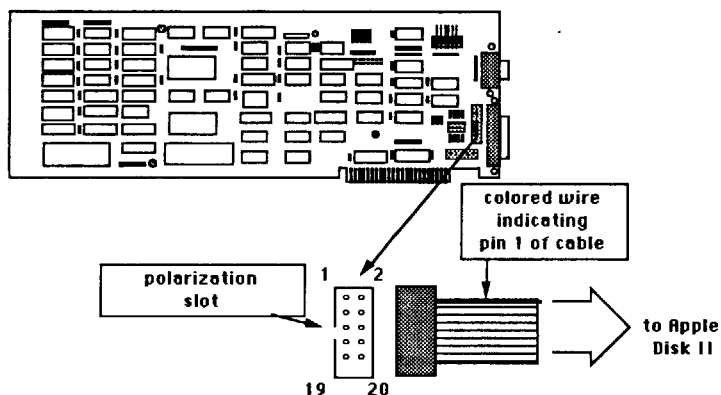


Figure 7

## Connecting an Apple Joystick Port:

1. Attach the Apple joystick port to the bracket as shown in Figure 8.


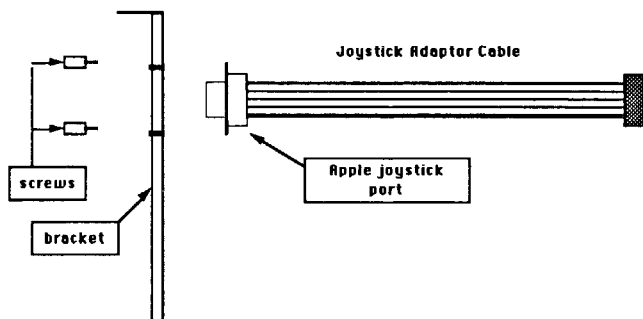


Figure 8

2. Connect the joystick adaptor cable to the **J1** connector on the Trackstar board, as shown below. Pin 10 of the cable connector is blocked, and pin 10 of the board connector J1 is missing, to ensure proper connection. See Figure 9.

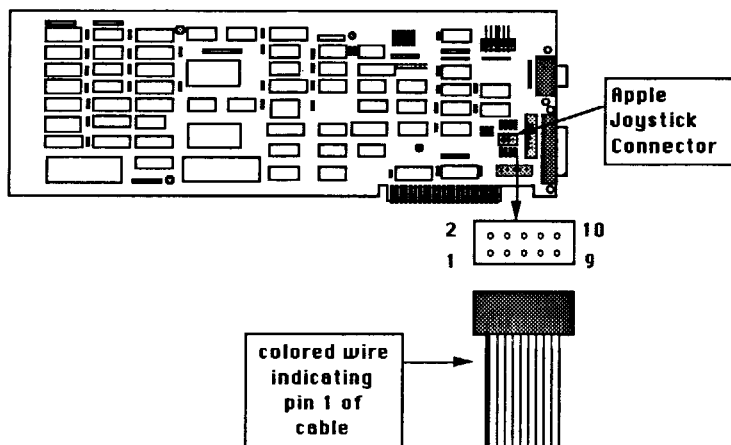


**Figure 9**

3. Attach the Apple joystick port and bracket to the top slot of the chassis.

### **Connecting Outside Cables:**

1. Connect the video adaptor cable to the PS/2 Model 30 video output port as shown in Figure 10. Note that the middle slot is used for the Trackstar board, and the top slot is used for an Apple joystick port.

**Rear view of  
PS/2 Model 30**

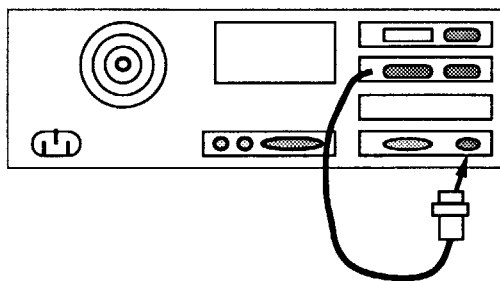


**Figure 10**

2. Connect devices to the following connectors:

- P1: Display Monitor
- P2: Apple Joystick
- P3: Apple Unidisk Drive
- P4: Serial Communication Device
- P5: Parallel Communication Device
- P6: Keyboard

See Figure 11.

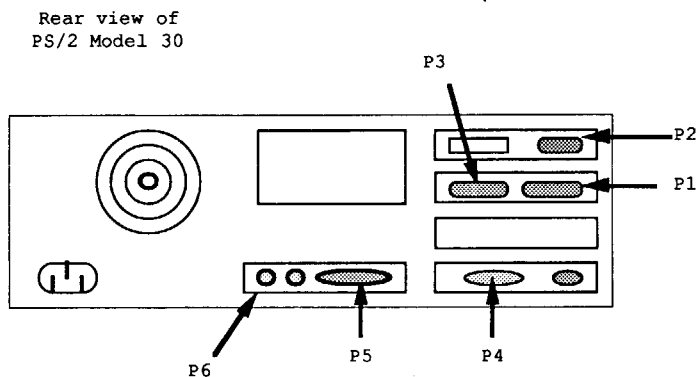

Rear View of PS/2 Model 30

**Figure 11**

### **Installing the Cover:**

Install the cover on your PS/2 Model 30. Re-attach the four screws, two on each side of the computer.

The hardware installation is complete.



## **Warning**

"This equipment has been certified to comply with the limits for a class B computing device, pursuant to Subpart J of Part 15 of FCC Rules. Only computers certified to comply with the Class B limits may be attached to this equipment. Operation with noncertified computers is likely to result in interference to radio and TV reception."

"This equipment generates and uses radio frequency and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions may cause interference to radio and television reception. It has been tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of the FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient the receiving antenna
- Relocate the computer with respect to the receiver
- Move the computer away from the receiver
- Plug the computer into a different outlet so that the computer and receiver are on different branch circuits

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

 
"How to Identify and Resolve Radio-TV Interference Problems."

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock NO. 004-000-00345-4.

"It is necessary to use shielded interconnect cables to insure compliance with FCC Class B limits for radio frequency emissions."









**DIAMOND COMPUTER SYSTEMS, INC.**

470 Lakeside Dr., Sunnyvale, CA 94086

408-736-2000

Printed in U.S.A.