

SUPERVISION™



GIANT TILT
SCREEN

PANTALLA GIGANTE
MOBILE

Many
Fun & Exciting
Games To
Choose From!!


Muchos Juegos
Divertidos y
Emocionantes Para
Escojer!!

TM

SUPERVISION

Portable Video Games System With Giant Screen

Juego de Video Portatil con Pantalla Gigante

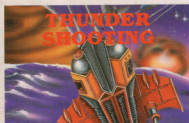

INCLUDE:

- 1 CONSOLE
- 1 CRYSTBALL GAME
- 1 STEREO EARPHONE
- 4 AA 1.5 BATTERY
- INSTRUCTION BOOKLET

INCLUDE:

- 1 CONSOLA
- 1 JUEGO CRYSTBALL
- 1 PAR. AUDIFONOS
- 4 BATERIAS 1.5 AA
- 1 INSTRUCTIVO COMPLETO



Item no.9205
Numero de modelo
9205
Hecho en HONG KONG


PG 9205-SPNN

Many fun & exciting games to choose from!!
Muchos juegos divertidos y emocionantes para escoger!!

Whom Manufactured for Golden Free Trade (915) 779-0679

SUPERVISION™

SECTION 1

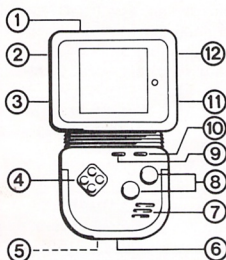

SUPERVISION Features

1. Power Switch (POWER)
2. External Power Supply Jack
3. Contrast Adjustment (CONTRAST)
4. Direction Buttons
5. Battery Cover (back)
6. Headphones Jack (PHONES)
7. Speaker
8. A" & "B" Buttons - Please refer the game cartridges instruction.
9. Select Buttons
10. Start Buttons
11. Volume Dial (VOLUME)
12. Two-Player Link (comm. port)

SECTION 2


Machine is bendable

How to install the batteries?

- Remove the cover on the back of the **SuperVision** and insert the four "AA" batteries.
- Make sure that the batteries, plus (+) and minus (-) ends are facing the right directions.
- Do not use the rechargeable batteries.
- Do not use mercury oxide batteries.
- For best results, use alkaline batteries.

Important Notice:


- When changing a game cartridge, make sure the power is turned "OFF".
- When inserting a game cartridge into the SuperVision slot, please make sure the side with the LABEL faces outward.
- To get the best connection, make sure to press on the four rounded buttons of the direction control.

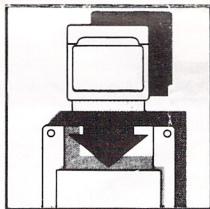

SECTION 3

FAULT	SUGGESTED ACTION
The display is black	<ul style="list-style-type: none"> • Adjust the contrast
The LED is dim	<ul style="list-style-type: none"> • Replace the batteries
No sound can be heard during the game	<ul style="list-style-type: none"> • Check that the game cartridge is inserted properly • Adjust the sound volume
There is nothing on the display when the power is turned on	<ul style="list-style-type: none"> • Turn OFF the power, wait a moment and turn it ON again • Adjust the contrast • Check that the game cartridge is inserted properly

SPANISH SECCION 1

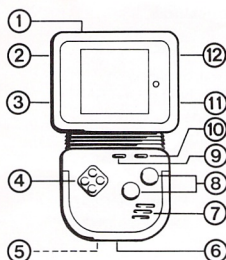

CARACTERISTICAS DEL SUPERVISION

1. Interruptor de energia (ENERGIA)
2. Interruptor para energia externa
3. Ajustamiento de contraste (CONTRASTE)
4. Botones de direcci3n
5. Tapa de la batea (detras)
6. Cubierta para auricular (AURICULAR)
7. Parlantes
8. Botones "A" y "B" - por favor referirse a las instrucciones de los cartuchos.
9. Botones de selecci3n
10. Botones para comenzar
11. Sintonizar volumen (VOLUMEN)
12. Eslab3n para dos jugadores (comm. port)

La m3quina se puede doblar


SECCION 2

C3mo instalar las pilas?

- Quite la tapa de la parte trasera de la SuperVisi3n y coloque cuatro pilas "AA".
- Asegurese de que los menos (-) y los mas (+) al final de las pilas esten colocados en la direcci3n correcta.
- No use pilas recargables.
- No use pilas de mercurio oxido.
- Para mejor resultados, use pilas alcalinas.

Nota Importante:

- Cuando usted cambie los juegos de cartucho, asegurese de que el aparato esta "OFF" (APAGADO).
- Cuando coloque uno de los juegos de cartucho dentro de la ranura del SuperVisi3n, asegurese de que el lado con la etiqueta queda hacia afuera.
- Est3 unidad viene con 8 teclas de direcci3n y bot3n de control para mejor movimiento de los dedos en los juegos de acci3n.
- Para juegos corrientes usted puede controlar las cuatro direcciones presionando solamente las cuatro esquinas del bot3n.

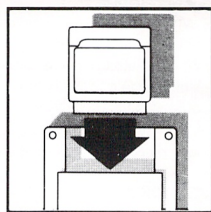

SECCION 3

FALLA	SUGERENCIA
La pantalla esta negra	<ul style="list-style-type: none"> • Ajustar el contraste
El LED es d3bil No se escucha ning3n sonido durante el juego	<ul style="list-style-type: none"> • Cambie las baterias • Verifique que el juego de cartucho ha sido colocado propiamente • Ajustar el volumen del sonido
No aparece nada en la pantalla cuando se prende el aparato	<ul style="list-style-type: none"> • Apague el aparato, espere por un momento y prendalo nuevamente. • Ajustar el contraste • Verifique que el cartucho ha sido colocado propiamente.